



Washer dryer

User's Manual

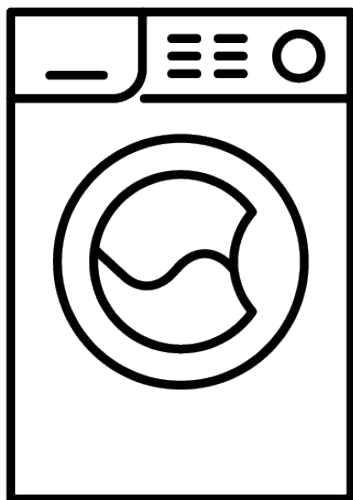

Operating Instructions – Washer dryer Indesit IWDC6105



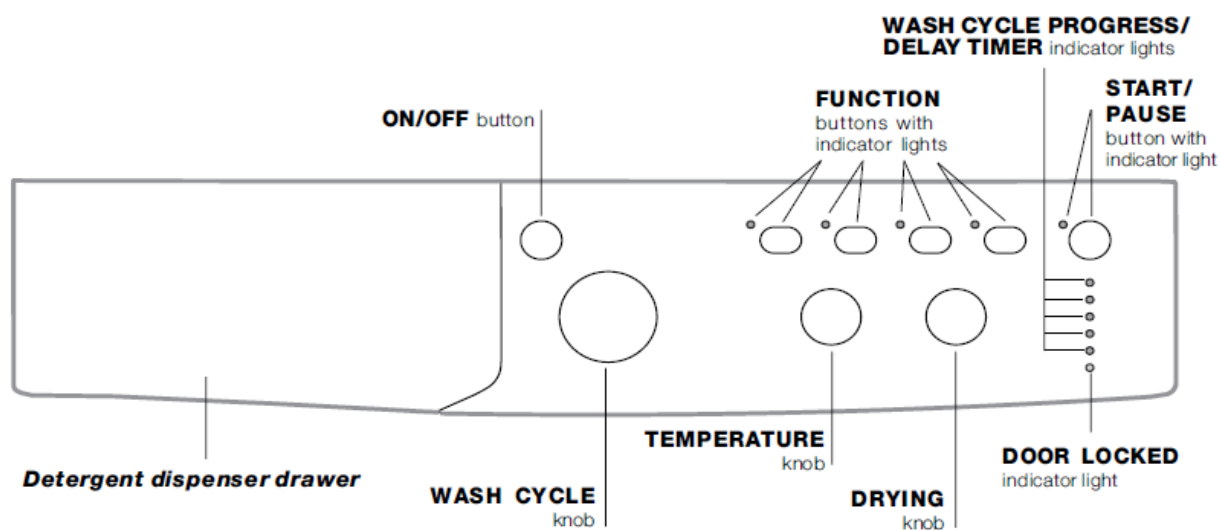
Control Panel



Starting a wash cycle

1. Switch the washer-dryer on by pressing the ON/OFF button. All indicator lights will switch on for a few seconds, then they will switch off and the START/PAUSE indicator light will pulse.
2. Load laundry and close door.
3. Set WASH CYCLE knob to the desired programme.
4. Set washing temperature.
5. Set drying cycle if necessary.
6. Measure out the detergent and washing additives.
7. Select the desired functions.
8. Start the wash cycle by pressing the START/PAUSE button and the corresponding indicator light will remain lit in a fixed manner, in green. (To cancel the set wash cycle, , pause the machine by pressing START/PAUSE button and select a new cycle.
9. At the end of the wash cycle the END indicator light will switch on. The door can be opened once the DOOR LOCKED indicator light turns on. Take out your laundry and leave the appliance door ajar to make sure the drum dries completely. Switch the washer/dryer off by pressing the ON/OFF button.

Table of wash cycles

Wash cycles	Description of the wash cycle	Max. temp. (°C)	Max. speed (rpm)	Drying	Detergents		Max. load (kg)		Cycle duration	
					Wash	Fabric softener	Normal	Eco Time	Normal	Eco Time
Daily										
1	White Cotton: extremely soiled whites.	90°	1000	●	●	●	6	-	145	-
1	White Cotton (1): heavily soiled whites and resistant colours.	60°	1000	●	●	●	6	-	140	-
1	White Cotton (2): heavily soiled whites and delicate colours.	40°	1000	●	●	●	6	-	123	-
2	Cotton: heavily soiled whites and resistant colours.	60°	1000	●	●	●	6	3,5	119	102
3	Coloured Cotton (3): lightly soiled whites and delicate colours.	40°	1000	●	●	●	6	3,5	89	78
4	Synthetics: heavily soiled resistant colours.	50°	800	●	●	●	2,5	2	82	65
Special										
5	Wool: for wool, cashmere, etc.	40°	800	-	●	●	1,5	-	55	-
6	Silk/Curtains: for garments in silk and viscose, lingerie.	30°	0	-	●	●	1	-	55	-
7	Jeans	40°	800	●	●	●	3	-	70	-
Sport										
8	Sport Intensive	30°	600	-	-	●	3	-	78	-
9	Sport Light	30°	600	-	●	●	3	-	68	-
10	Special Shoes	30°	600	-	●	●	Max. 2 pairs	-	50	-
Dry										
11	Cotton	-	-	●	-	-	4	-	-	-
12	Synthetics	-	-	●	-	-	3	-	-	-
13	Express Wash & Dry	30°	1000	●	●	●	0,5	-	35	-
Partial wash cycles										
	Rinse	-	1000	●	-	●	6	-	36	-
	Spin	-	1000	●	-	-	6	-	16	-
	Drain	-	0	-	-	-	6	-	2	-

Setting the drying cycle

Turn the drying knob to select the desired drying option.

There are two options:




A-Based on time: From 40 minutes to 150.

B-Based on desired laundry dryness level

Drying only

Use the cycle selector knob to select a drying cycle (11-12-13) in accordance with the type of fabric. The desired drying level or time may also be set using the DRYING knob.

Table of drying times

Fabric type	Load type	Max. load (kg)	Cupboard dry 	Hanger dry 	Iron dry 
Cotton	Clothing of different sizes, Terry towels	4	180	170	140
Synthetics	Sheets, Shirts, Pyjamas, socks, etc.	3	140	120	100

Functions


The various wash functions available with this washer-dryer will help to achieve the desired results, every time. To activate the functions:


1. Press the button corresponding to the desired function
2. The function is enabled when the corresponding indicator light is illuminated.

Note: If the indicator light flashes rapidly, this signals that this particular function may not be selected in conjunction with the selected wash cycle.

EcoTime Selecting this option enables you to suitably adjust drum rotation, temperature and water to a reduced load of lightly soiled cotton and synthetic fabrics. EcoTime enables you to wash in less time thereby saving water and electricity.

 **1000-500** Press this button to reduce the spin speed

 **Intensive wash** This function offers a high performance wash using a greater quantity of water in the initial phase of the cycle.

 **Delay timer** This timer delays the start of the wash cycle by up to 9 hours. Press the button repeatedly until the indicator light corresponding to the desired delay time switches on. The fifth time the button is pressed, the function will be disabled. Once the Start/Pause button has been pressed the delay time can only be modified by decreasing it until launching the set programme.