 


WITTENBERG

BY COVE

YOUR APPLIANCES

Microwave

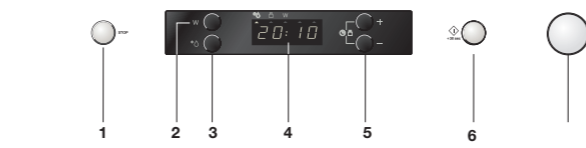

to open the door



function for normal cooking and reheating

the +/- buttons to set the time

the power button repeatedly to set the time

 
the Start button

the cooking process has started, time can be increased in 30 seconds by pressing the Start button. Each press increases the time by 30 seconds. You may also alter the time by pressing the +/- buttons to increase or decrease the time.

the power button will change the power level. The first press will show you the current power level. Press the power button repeatedly to change the power level.

ATAG Dishwasher

BEDIENINGSPANEEL

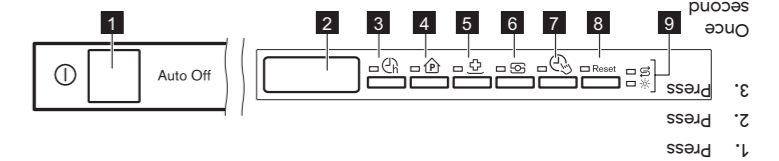

- 1 / On/off button
- 2 / Display
- 3 / Delay button
- 4 / Program button
- 5 / Heavy load wash button
- 6 / Multi tab button
- 7 / Time delay button
- 8 / Reset button
- 9 / Indicator lights

To switch the dishwasher on & set the program –
Add the detergent tablet into the compartment inside the dishwasher door.

 
- 1 / Stop button
- 2 / Power button
- 3 / Jet Defrost button
- 4 / Display +/- buttons
- 5 / Start button
- 6 / Rinse button
- 7 / Heavy load button
- 8 / Multi tab button
- 9 / Program button

Cancelling a program in progress –

Open the door and press the Start button repeatedly to cancel the program.



Siemens Washer Dryer

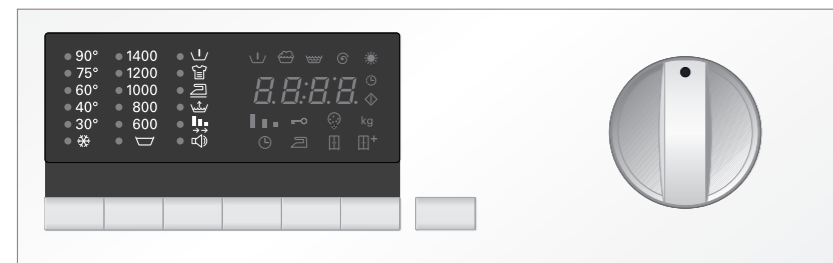

Indicator Lights will show which temperature, spin speed and options have been chosen.

Display Panel — shows the settings that have been selected, the progress of the current programme and the programme status.

Programme progress	Pre-wash, Main wash, Rinse, Final spin, Drying
Drying options	Time-controlled drying, Iron-damp, Cupboard-dry, Extra-dry
Auxiliary displays	Remaining time, Programme start, Childproof lock, Fluff removal cycle, recommended load

Buttons –

°C Temperature / @ Spin (speed)
/ Delay / * Drying / < Start/Pause

Programme Selector –

for switching the washer-dryer on/off and selecting the programme. Do not adjust the programme whilst washing/drying is in progress.

Washing Programmes –

Cottons / Cottons Eco / Easy Care
Delicate/Silk / Wool / Rapid Wash
Mixed fabrics / Outdoor clothing
Shirts / Night (quiet) Wash

Drying Programmes –

Intensive dry at 90°
Low heat dry at 60°

Special Programmes –

Rinse & Spin
Empty & Spin

Washing Options –

(symbols on the display panel)

- Pre-wash
- Intensive
- Easy-iron
- Water plus
- Flexi time
- Signal

Drying options –

- Time-controlled drying
- Iron-damp
- Cupboard-dry
- Extra-dry

How to cancel the programme –

Press & hold the start/pause button until is displayed.

NO WASHING MACHINE IN YOUR APARTMENT?

We have a number of laundry rooms which are free for you to use and a selected laundry service (for those in Building '4'). For more information please contact your House Host on XX.

How to use the functions –


To Wash Only	To Dry Only	Wash & Dry
1. Choose the desired washing programme	1. Choose the desired drying programme	1. Choose the desired washing programme
2. Adjust temperature and spin speed if required	2. Press the drying button to set drying options	2. Adjust temperature and spin speed if required
3. Press the start/pause button	3. Press the start/pause button	3. Press the drying button to set drying options
		4. Press the start/pause button

Child Lock –

To activate & deactivate: Press the **Option** and **Select** buttons at the same time. When the child lock is activated 'H' lights up on the display.


ATAG Hob

 Switching on –

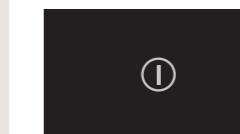

Place pan on a cooking zone. Touch the On/Off button.

 Setting Power –

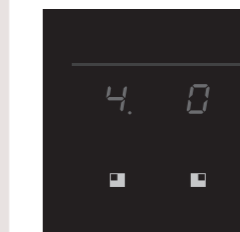

Tap the desired zone selection button.

Use the + or – button to choose the correct setting. The hob will automatically then start in the chosen setting.

Switching off –

Touch and hold the – and + buttons simultaneously for one second of the cooking zone you wish to switch off. OR Select '0' by touching the – button. If you wish to switch all cooking zones off, touch the on/off button and this will turn off all cooking zones.

 
Note –

The hob can remain hot for sometime after use. An 'H' remains on the display as long as the cooking zone is hot.

Your WITTENBERG OVENS

Here are the three different ovens currently featured in our apartments.

ATAG OX6411B OVEN

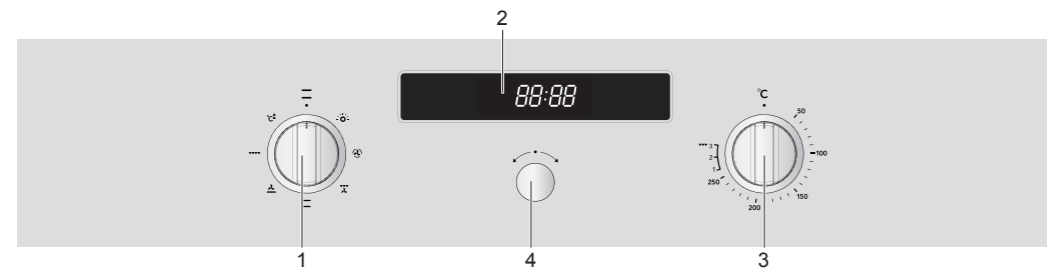

1 / Function Select Knob / 2 Window Display / 3 Temperature Control Knob / 4 Time Select Knob

Oven Functions –

- Convection**
Heating frozen dishes/Baking
- Top heat & Convection**
Roasting
- Conventional**
Standard Roasting/Baking
- Bottom Heat & Convection**
Pizza/Baking
- Large Grill**
Grilling Meat

ATAG CX4511C COMBI OVEN



The oven has 10 functions and 1 cleaning function

1. Place dish in the oven (note: please do not use metallic plates or bowls)
2. Turn the 'mode selector' to the required oven setting
3. Touch the 'temperature/power key'
4. Set the oven to the required temperature using the 'multi-function selector'
5. Select, if required, a cooking time by pressing the 'timer key'
6. Press the Start/Stop key

Using the Timer –

This can be used independently of the oven operation.

1. Touch the 'timer key' several times to select a timer function
2. Set the time by turning the 'multi-function selector'
3. Press the 'start/stop' key to start the timer. During the last minute, the seconds remaining are displayed

Oven Settings –

- Fast preheat**
Gets oven to desired temperature quickly
- Top Heat & Bottom Heat Setting**
Baking/Roasting
- Grill Setting**
Standard Grilling
- Top heat & Fan Setting**
Grilling Meat and Fish
- Hot air & Bottom Heat Setting**
For crisping/browning of food
- Hot air setting**
Baking
- ECO baking & Roasting**
Baking/Roasting

 
Automatic Functions –

- Aqua clean**
Hot steam cleaning
- Defrosting**

Microwave Function / Combi function –

- Microwave & Hot air**
Multi-purpose cooking
- Microwave**

ATAG CX4311A COMBI OVEN

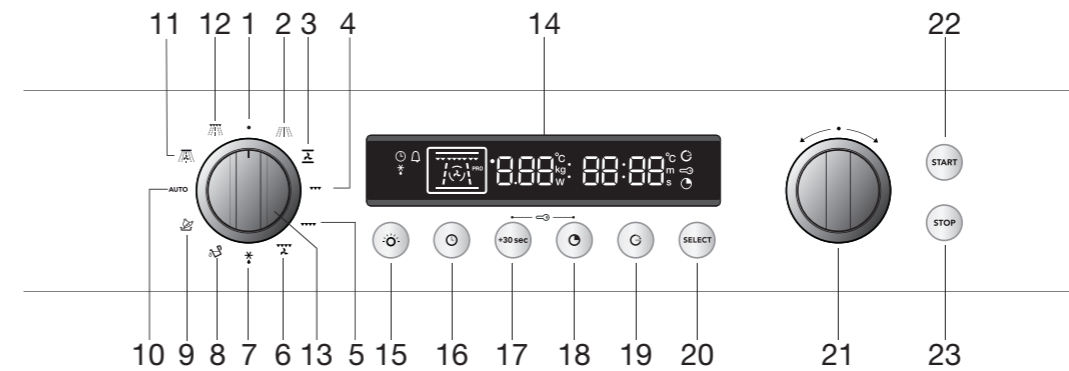


- 1 / Off stand
- 2 / Microwave stand
- 3 / 'Fan Oven' setting
- 4 / 'Grill' setting
- 5 / 'Big grill' setting
- 6 / 'Grill & fan' setting
- 7 / Defrost
- 8 / Water clean function
- 9 / Vegetable menu
- 10 / Automatic preparation
- 11 / Combi Microwave with hot air
- 12 / Combi Microwave with grill
- 13 / Function knob
- 14 / Display
- 15 / Oven light on/off button
- 16 / Clock button
- 17 / +30 seconds button
- 18 / Test preparation time
- 19 / End cooking time
- 20 / Select key
- 21 / Function button
- 22 / Start button
- 23 / Stop/Cancel key



Oven settings –

 - Fan Oven**
For even heating, ideal for baking
- Grill**
- Big Grill**
For steaks, sausages and toast
- Grill & Fan**
For meat, fish, poultry and vegetables

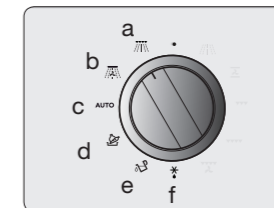

Combination functions –

- a Microwave + grill (suitable for fast heating and browning)
- b Microwave + fan oven (suitable for all types of meat and poultry)
- c Automatic cooking
- d Vegetable Menu mode
- e Water clean function (oven cleaning program)
- f Defrost

Using combination functions –

1. Turn the 'function knob' to the desired position (a or b).
2. Turn the 'function dial' to set the desired cooking time.
 - To change the power, press 'select' and turn the 'function dial' to the desired level
 - If you want to change the temperature, press 'select' again and rotate the 'function dial' to the desired level.
3. Press 'start'.

Using the Microwave function –

1. Turn the 'Function button' to the microwave mode. Time and power are displayed on the display.
2. Turn the 'Function Dial' to set the desired cooking time. If you do not want to change the power, press 'start' to start the cooking process. If you want to change the power, press 'select' and turn the 'function dial' to the desired level.
3. Press 'start'.

 


Using the Oven function –

1. Turn the 'Mode dial' to the fan oven mode.
2. Turn the 'function dial' to the desired oven function (see oven settings above).

The oven and recommended temperature are displayed (default: hot air).

- If you want to change the temperature, press 'select' and turn the 'function dial' to the desired temperature.
 - To set the cooking time, press 'cooking time' and rotate the 'function dial' to the desired preparation time.
3. Press 'start'.

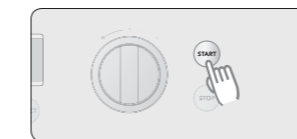

Note –

During cooking, you can adjust the cooking time and temperature. When using the oven mode, the operation of the convection heating element and the top and bottom elements regularly adjust to regulate temperature.

Caution –

do not use metal trays whilst using the microwave function.