



Dishwasher

User's Manual

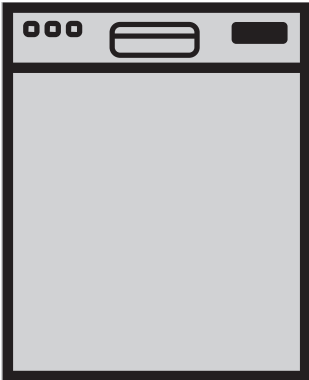

Operating Instructions - Flavel Dishwasher FDW451

Control Panel

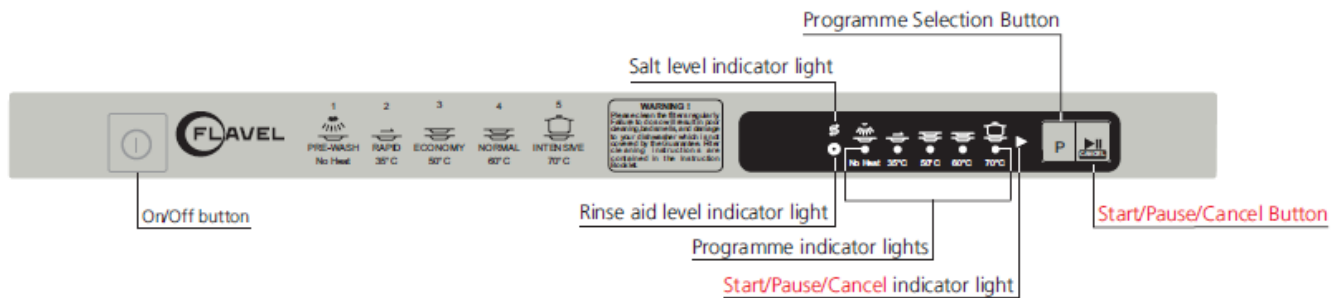

Energy and water saving

- Scrape excess food from the dishes before loading.
- Start your dishwasher after fully loading the machine.
- Do not use the pre-wash programme unless required.
- Make your programme selection as per the programme chart and quick reference guide supplied.

What should not be washed in your dishwasher

- Do not wash items soiled with cigarette ash, candle, paint wax, dyes, chemicals etc.
- Do not wash cutlery with wooden or bone handles, items stuck together with adhesives or plastic items not resistant to high temperatures, copper, tin items and aluminium ware in your dishwasher.

Loading the dishwasher

- Loading the dishwasher correctly will increase the washing, drying and energy performance of your machine.
- Remove any large scraps of food from the dishes before placing in the dishwasher to avoid clogging the filters.
- There are three separate baskets in which you can put your dishes.
- Place large or heavily soiled items in the lower basket and small, light or delicate articles in the upper basket. Put forks, small and medium size knives and spoons in the cutlery basket.
- Place tall, narrow items in the middle of the racks.
- Long-stemmed glasses should lean against the basket, the racks, or the supports not against the dishes.
- The shelves on the rack are made height adjustable to accommodate tall items.

- When loading your dishwasher please ensure tall glasses rest against the sides of the upper basket. Do not allow tall glasses to rest against each other since they may be damaged during washing if not properly supported.
- Always arrange saucepans, cups and glasses upside down.
- You can fold the racks in the upper basket when you need more space for large items.
- Place large items such as saucepans in the lower basket.
- You can remove the cutlery basket to make room for other items. Place spoons and forks in the cutlery basket with handles down and knives with handles up to prevent accidental injury.

Operating the dishwasher

- Turn the water tap on. Open the door of the machine.
- Check that the upper and lower arms can rotate freely.
- Put in the dishwasher table.
- Push in the on/off button and check that the programme indicator lights come on.
- Select the required programme by referring to the programme chart.
- Select the desired programme by using the programme section button. Then select from available options, if required.
- Press Start/Pause/Cancel button and check that the function indicator light comes on.
- Close the door then the programme will start.
- An audio signal with an interval of 10 seconds warns you to switch your machine off when the selected washing program ends. This audio signal warns you for a duration of 5 minutes and then turns off.
- Do not open the dishwasher door whilst the appliance is in operation. However, in case the door is opened while the machine is working, then a safety mechanism the machine immediately stops. Water may be very hot, so be careful.
- Care must be taken if opening the door as steam and water will escape.
- Press the on/off button after the programme is completed. The indicator lights will go off.
- Turn off the water tap, unload the baskets.
- Just after the dishwasher has started the selected programme, if you find that you want to put in another item to be washed, open the door carefully. Care must be taken if opening the door, as steam and water will escape. Then after putting in the item, close the door. The dishwasher will resume operation.

Unloading the dishwasher

- Dishes should be allowed to cool for about 15-30 minutes before the end of the programme.

- You will improve drying results by leaving the dishwasher door ajar for at least 15-30 minutes as soon as the programme finishes.
- Care must be taken when opening the door as steam will escape.
- First unload the lower, then the upper rack. This prevents drops of water from falling onto the full lower basket when the dishes in the upper basket are being removed.