 


# Siemens


# Microwave

## User's Manual

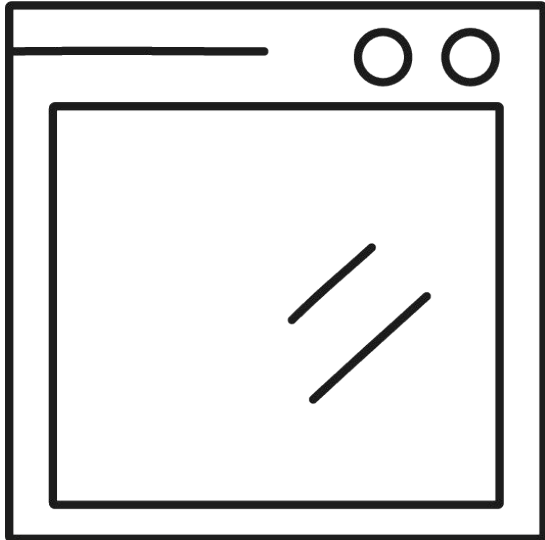

# Operating Instructions - Microwave Siemens HB84E562B

## Control Panel

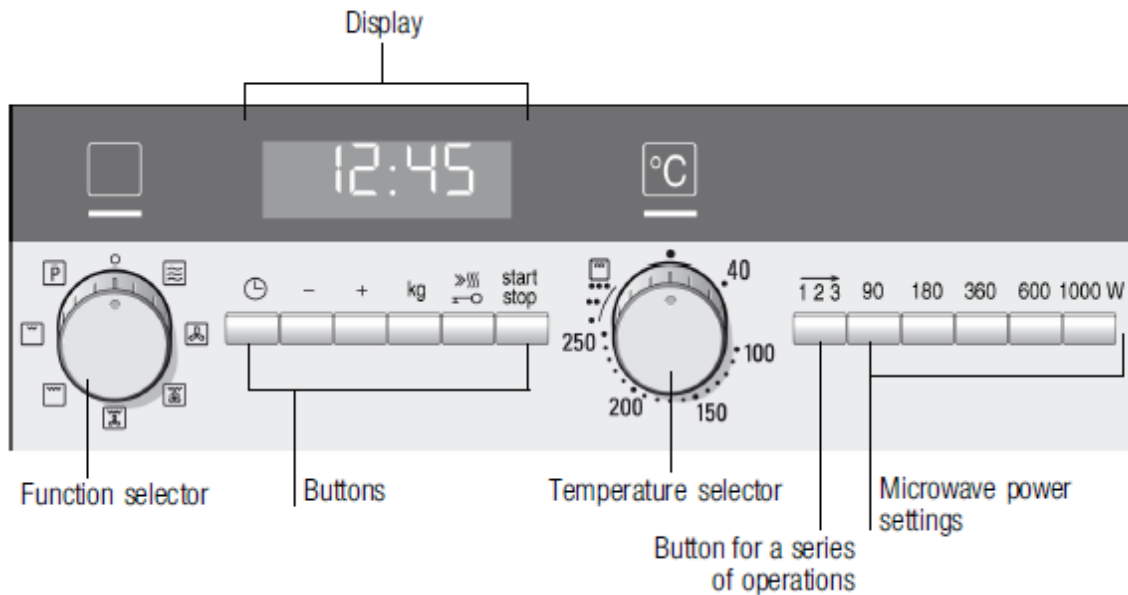









## Buttons and display

Symbol	Button function
	Open and close the time-setting options menu
<b>+</b> Plus	Increase the adjustment values
<b>-</b> Minus	Decrease the adjustment values
<b>kg</b>	Select weight
	Select rapid heating or childproof lock
	Press briefly = start/stop operation Press and hold = cancel operation
	Select sequential operations
90	Select microwave power 90 watt
180	Select microwave power 180 watt
360	Select microwave power 360 watts
600	Select microwave power 600 watts
1000	Select microwave power 1000 watts


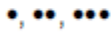 




## Function selector

Use the function selector to set the type of heating.

Setting	Use
 Off position	The oven is switched off.
 Microwave	Select microwave operation.
 Hot air	For baking sponge cakes in baking tins, flans and cheesecakes as well as cakes, pizza and small baked products on the baking tray.
 Convection grilling	Is particularly suitable for roasting pieces of meat.
 Hot air grilling	Poultry goes brown and crispy. Baked casseroles and grilled dishes work out best using this setting.
 Grill, large surface	Select between the levels high, medium or low. This is ideal if you wish to grill several steaks, sausages, pieces of fish or slices of bread.
 Grill, small surface	This type of heating is ideal for cooking small quantities. Place the grill items next to each other in the centre of the wire rack.
 Programmes	4 defrosting programmes 11 cooking programmes Type of heating and cooking time are determined according to weight.

## Temperature Selector

Set the temperature or grill setting using the temperature selector.

Setting	Meaning
 Off position	The oven does not heat up.
40, 100-250 Temperature range	The temperature of the oven in °C.
 Grill settings	Grill settings for the  Grill, large area. <ul style="list-style-type: none"><li> = setting 1, low</li><li> = setting 2, medium</li><li> = setting 3, high</li></ul>

## Setting the type of heating and temperature

 
1. Use the function selector to set the type of heating.
2. Set the temperature or grill setting using the temperature selector.
3. Press the Start/Stop button. The oven begins to heat up.

If you open the door during the operation, the operation is paused. Press the Start/Stop button after closing the door and the operation will continue.

To pause the operation press the Start/Stop button. To resume it press the Start/Stop button.

To switch off the oven turn the function selector to the zero position.

### Setting the microwave

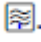1. Set the function selector to .
2. Press the button for the microwave power setting you require. The button lights up. A suggested cooking time is displayed.
3. Set the cooking time using the plus or minus button.
4. Press the Start/Stop button and the operation begins. You will see the cooking time counting down.

Once the cooking time has elapsed a signal sounds and the microwave operation has finished. Turn the function selector to the off position.

### Opening the oven door during operation

Operation is suspended. After closing the door, press the Start/Stop button briefly. The operation will then continue.

### Changing the cooking time

This is possible at any time. Change the cooking time using the plus or minus button.

### Changing the microwave power level

Press the button for the new microwave power level. Set the cooking time using the plus or minus button and start again.

### Cancelling operation

Press and hold the Start/Stop button for approximately 4 seconds and turn the function selector to the off position.