


Baumatic BDI 2L952 - Quick User Guide

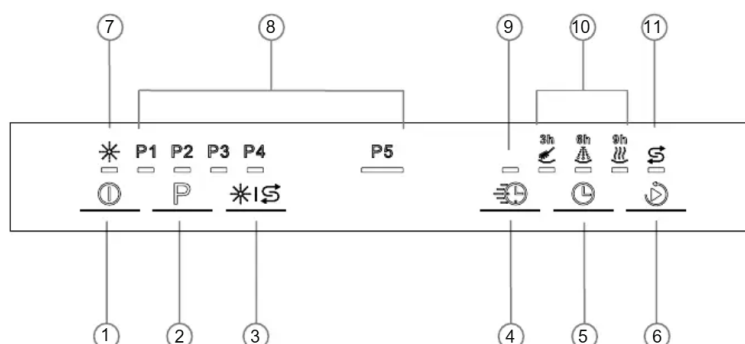

Control Panel & Buttons:

1. **ON/OFF Button** – Turns the dishwasher on or off.
2. **PROGRAMME SELECT Button** – Choose the desired wash cycle.
3. **Lack Salt and Rinse Aid Reset Button** – Resets indicators after refilling.
4. **Additional Function Button** – Activates extra features (e.g., half load, extra drying).
5. **START DELAY Button** – Delays the wash cycle start time.
6. **START/PAUSE Button** – Starts or pauses the selected program.

Indicators:

- **Rinse Aid Indicator** – Lights up when rinse aid needs refilling.
- **Salt Aid Indicator** – Turns on when dishwasher salt needs refilling.
- **Programme Indicator** – Shows the selected wash cycle.
- **Additional Function Indicator** – Displays active extra features.
- **START DELAY/Status Indicators** – Shows delay timer and wash progress.

Available Wash Programs:

- **P1 - ECO (50°C, 298 min)** → Energy-efficient cycle for normal loads.
- **P2 - Universal (60°C, 115 min)** → Standard wash for everyday dishes.
- **P3 - Intensive (70°C, 130 min)** → For heavily soiled pots and pans.
- **P4 - Prewash (45°C, 20 min)** → Short rinse before main wash, no detergent needed.
- **P5 - Rapid (45°C, 30 min)** → Quick wash for lightly soiled dishes.