 


Dishwasher

User's Manual

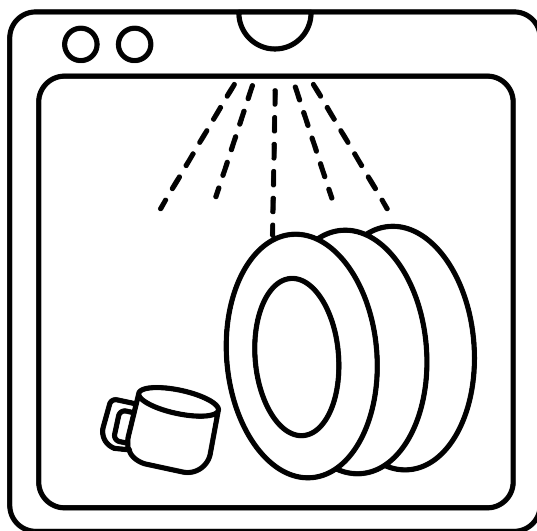

Operating Instructions – Dishwasher Fisher & Paykel DD60SHI7

Starting a wash

1. Discard scraps off the crockery
2. Load dishes carefully
3. Check spray arms are clear with nothing blocking their rotation
4. Add detergent into the detergent dispenser and close the dispenser door.
5. Select the wash programme



Power the dish washer on by pressing this button  then select the wash programme using the arrows 

6. Start the wash or set Delay start

Close the drawer and press 

Wash programme controls

Wash program indicators
These show which program is selected.

Wash program selector
Press to scroll through the wash programs.

STANDARD PROGRAMS - designed to clean and dry your dishes				
HEAVY	NORMAL	FAST	DELICATE	RINSE
Heavily soiled pots, pans and dishes.	Dishes with normal soils for optimum performance.	Lightly soiled dishes.	Lightly soiled and heat sensitive crockery.	Prevents odors and soils drying on dishes.

ECO PROGRAMS - designed to clean your dishes energy-efficiently			
HEAVY ECO	NORMAL ECO	FAST ECO	DELICATE ECO
Heavily soiled everyday dishes.	Normal soiled dishes for optimum water and energy use.	Lightly soiled, non-greasy dishes.	Lightly soiled, non-greasy and heat sensitive crockery.

ECO selector and indicator
Press if you'd like the program to use less energy. The indicator will glow red when an Eco program has been selected. If you require enhanced drying, we do not recommend selecting an Eco program.

Main controls

Power on/off

Opening the drawer will automatically turn the dishwasher on for 30 seconds.



Start/Pause

Press to start, pause or resume a wash.

After pausing a wash, wait for 3 beeps before opening the drawer.



Keylock


Keylock disables all the buttons – helpful if cleaning the dishwasher. To activate, press and hold the button until you hear one beep (3 seconds). The light above the button will glow steadily. To cancel, press and hold the button until the light above it goes out.




Childlock


Childlock locks the drawer and disables all the buttons, preventing unauthorised use by children. To activate, press and hold the key button until you hear two beeps (5 seconds). The light above the button will glow steadily. To cancel, press and hold the key button until the light above it goes out.

Cancel wash/Cancel delay start

Press  to cancel a wash that has already started or to cancel the delay start setting. If there is any water in the drawer, it will automatically drain before the dishwasher turns off.

Set Delay start

1. Press and hold  until the light above it changes from green to orange, then release. You are now in Delay start mode.

2. Press  briefly again repeating as many times as the number of hours you want to delay the start of a wash by. The dishwasher will emit a beep for every hour of delay time (1 to 12 hours). You have now set Delay start. The wash will start once the delay time is over, provided the drawer is closed.

After the wash

The dishwasher will beep six times to indicate the end of the wash programme. For best drying results, we recommend unloading the dishes once they have cooled.