

Hob

User manual

DOMINO HOB

SIEMENS - IQ700 EX375FXB1E

SWITCHING THE APPLIANCE ON

The hob is turned on and off with the main switch. To switch on: press the symbol. The indicator beside the main switch and the 0 indicator for the front hotplate light up. The hob is ready to use.

To switch off: press the symbol until the indicator above the main switch disappears.


All hotplates are off. The residual heat indicator stays on until the hotplates have cooled down completely.

SETTING THE HOTPLATE

The desired power level is set in the programming panel.

Power level 1 = minimum power.
Power level 9 = maximum power.
The hob must be switched on.

Select the hotplate with the symbol or symbol. The # indicator lights up. Then select the required heat setting from the settings range.

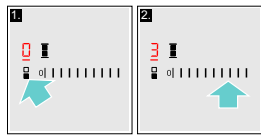

The heat setting is set.

POWERBOOST FUNCTION

 
The Powerboost function can be used to heat large amounts of water more quickly than the power level 9. As two independent hotplates: (model 1) if you want to activate this function for hotplate 1, hotplate 2 must be turned off, and vice versa.

If not turned off, the letter and power

level 9 will flash alternately on the hotplate display and the power level 9 will be reset

without activating the function. As one single hotplate: (model 2) the Powerboost function can be activated on the entire

hotplate. In this case, place the pan at the centre of the flexible zone as shown in the Flexible zone section.



To activate:

- Select the hotplate.
- Touch the symbol. Lights up on the display, the function is activated.

To deactivate:

- Select the hotplate.
- Touch the symbol.
- The display goes out and the hotplate switches back to the 9 heat setting. The function is deactivated.

GETTING TO KNOW YOUR APPLIANCE



- Main switch
- Selecting a hotplate
- Control panel
- Timer function
- Flexible cooking zone
- Operating status
- Heat settings
- Powerboost function
- Residual heat
- Time program function
- Setting the cooking time
- Timer
- Locking the control panel for cleaning
- Move function
- Stopwatch function

CLEANING & CARE

Clean the hob after each use. Wait until the hob is cool enough before attempting to clean it.

Only use cleaning products specifically designed for hobs.

Do not use:

- Undiluted washing-up liquid
- Dishwasher detergent
- Abrasive products and corrosive products

Never use diffuser hobs or pans made from common thin steel

- Glass
- Copper
- Aluminium