 


# Siemens

# Washer Dryer

## User's Manual

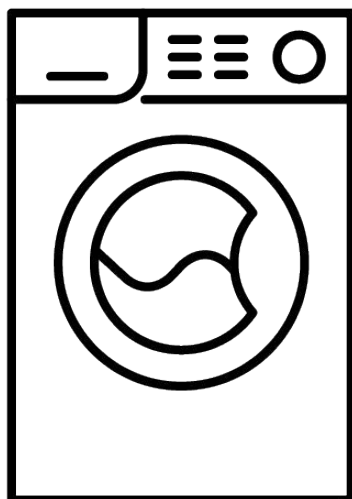

# Operating Instructions – Washer dryer Siemens D12-52

## Control Panel

### Start/Pause -touch button


For starting the washing/drying cycle (programme must have been selected). The Pause function is not active during drying process.

### Programme selector

For switching the machine on and off and for selecting the programme.


Can be rotated in either direction.

The programme selector does not rotate while the programme is running, the programme sequence is electronically controlled.

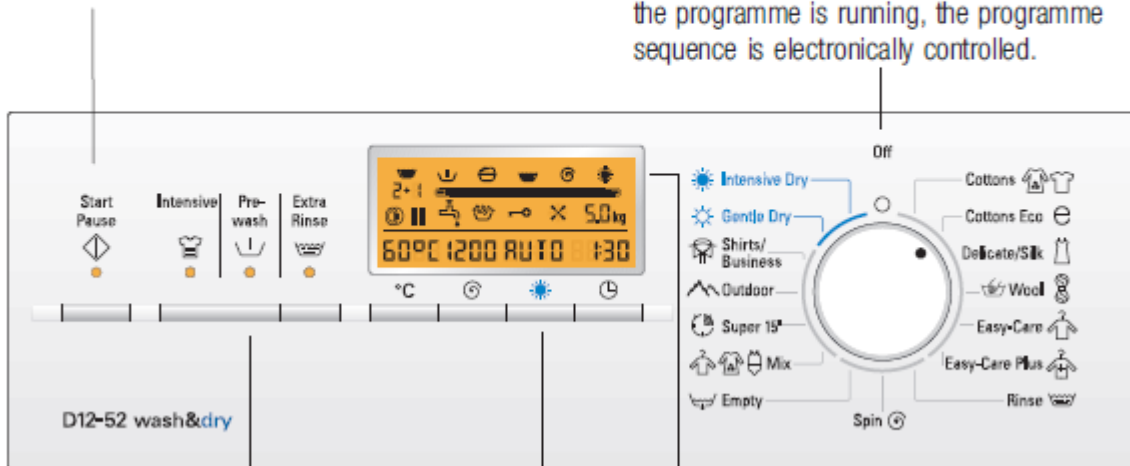

### Touch buttons for additional options

 (in addition to the programme if required)

**Intensive**  : Intensive wash

**Prewash**  : Actuate prewash

**Extra Rinse**  : Additional rinsing cycle

Additional options can be combined.

The indicator lights of the buttons come on, if the additional options are active.

Switching off the additional option: Touch the button again. Indicator light goes out.

### Display panel

Indicates the settings which have been selected (e.g. washing temperature, spin speed, drying duration, finish in time, childproof lock, recommended load) as well as programme progress.

#### Touch button

Selects the washing temperature or cold wash.

#### Touch button

Selects the spin speed or no final spin.

 













 
 

#### Touch button




Selects the drying time or drying mode.

#### Touch button

Selects the finish in time. (delays the end of the programme).


## Display panel


Display		Notes
	Prewash	On if selected
	Washing	Not on if Rinse  , Spin  , Empty  or Drying programme was selected
	Rinse	Not on if Spin  , Empty  or Drying programme was selected
	Final spin / Empty	Not on if a programme with the "----" setting (without final spin) or drying programme is running
	Dry	On if the drying programmes or drying time/mode was selected
	Progress bar	For the programme status
	Low water pressure	On if the water pressure is too low.
	Overdosage	On if too much detergent dispensed
	Childproof lock	On if selected
	Fan	On if the drying programmes and drying time was selected
5,0kg*	Recommended load	Not on if Rinse  , Spin  , or Empty  additional programme was selected
60 °C*	Washing temperature or	Expected washing temperature
cold*	Cold wash.	
1200*	Spin speed or	Default spin speed of the programme or selected speed
----*	without final spin	
2:00*	Drying duration or	Expected drying programme duration or auto drying.
AUTO*	Drying mode	
1:30*	Programme duration	Expected programme duration

Display	Notes	
<b>Other displays at this location:</b>		
24h*	Finish in time	Selected finish in time
-0-	End of programme or	
---	End of programme without final spin or	
PAUS	Pause	
OPEN	Door can be opened	
F:16*	Fault displays	See page 48
	Rinse cycle	Not on if there is no Rinse cycle and additional rinse cycle was not selected
	Door open	On if the door can be opened during "Pause" period
	Pause	On if the programme in pause.

### Wash cycle


1. Sort and load the laundry
2. Add detergent


Use Dispenser 1 for prewash or starch, Dispenser 11 for main wash, water softener, pre-soaking agent, bleach and stain removal product. Dispenser  for cleaning product e.g. fabric softener or conditioner.

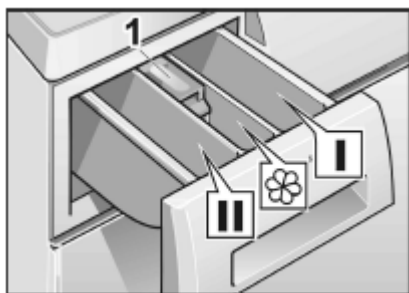

3. Select the desired programme using the programme selector.
4. Select the desired drying programme – Intensive dry, gentle dry or automatic drying

### Guide values for drying times

Cottons / coloureds (cotton, linen)					
Dry weight in kg	0.5	1.0	1.5	2.5	
	Recommended drying times (min)				Programme
Cupboard dry	50-60	60-70	70-80	90	Intensive Dry 
Iron dry	40-50	50-60	60-70	70-80	

Easy-Care / Synthetics					
Dry weight in kg	0.5	1.0	1.5		
	Recommended drying times (min)				Programme
Easy-Care	30-35	40-45	50-55		Gentle Dry 
Acrylics		25	25-30		

### Washing/drying with standard settings


#### Your washer-dryer can be used in three ways:

- Washing only
- Drying only
- Washing and drying without a break in between


#### Washing only

1. Turn the programme selector to the desired programme. The Start/Pause indicator light flashes
2. The progress bar, default rinse cycle, maximum load, default washing temperature, default spin speed, drying duration and programme duration are displayed for the selected programme.
3. Select any additional options required e.g. Intensive, Pre-wash or extra rinse.
4. Touch the Start/Pause button. The programme starts and the indicator light remains lit for the entire duration of the programme.

#### Drying only

1. Turn the programme selector to Intensive Dry or Gentle Dry
2. Touch the  button to set the desired drying time or automatic drying.
3. The progress bar, maximum drying load, drying time and programme duration are displayed.
4. Touch the Start/Pause button and the drying programme starts.


 
### Washing and drying without interruption

1. Select the desired washing programme
2. Select desired additional functions
3. Touch the  button to set the desired drying time or automatic drying, the programme will be washing and drying without interruption.
4. Do not interrupt the drying process, if it is necessary please select 15 minutes cooling programme before opening the door.
5. The following is displayed for the selected programme: Progress bar, default rinse cycle, maximum load, default spin speed, default washing temperature, drying time or automatic drying symbol and programme duration.
6. Touch the Start/Pause button and the programme starts.

### Changing the washing temperature

Keep touching the temperature button °C until the desired temperature displays.

### Changing the default spin speed

Touch the  button until the desired spin speed is displayed. If setting - - - (without final spin) has been selected, the washing remains in the final rinsing water. Before the laundry can be uploaded, the Empty or Spin programme must be performed. Touch  button to select the desired spin speed or touch the "Start/Pause" button directly to start subsequent spin cycle with default spin speed.

The speed can be changed at any time by touching the  button until the new speed is displayed.

### Changing the programme

If you have accidentally selected the wrong programme, turn the programme selector to a newly selected programme. If required, change other settings. Touch the Start/Pause button and the programme will start.

### Cancelling the programme

- If you would like to terminate a programme and remove the laundry turn the programme selector to Empty, Spin or Rinse. If a programme is interrupted at a high temperature, Rinse should be selected to cool down the laundry.
- For drying programmes, select time-dry 15 min cooling programme to cool down the laundry.
- Touch the Start/Pause button

- Wait until the programme ends and turn the programme selector to Off. You can then open the washer-dryer door and remove the laundry.

### Pausing the programme

- If you would like to pause a running programme without changing the sequence, touch the Start/Pause button during washing cycle, the display shows the pause symbol and "Paus", if the door open symbol flashes at this moment it means the door can be opened after 1 minute later, when the door open symbol and "open" come on, open the door if required, add/remove the laundry, close the door.
- To continue the programme, touch the Start/Pause button again.