

Operating Instructions – Dishwasher Whirlpool ADG450

Programme Guide

Programme temperature	Recommended load type	Cycle length (mins)
Intensive 70°C	Heavy soiled crockery with dried on food. Especially suitable for pans and saucepans	100
Normal 65°C	Normally or heavily soiled crockery with dried on food	98
Bio-Normal 50°C	Normally or lightly soiled crockery with dried on food	92
Rapid 40°C	Lightly soiled crockery with no dried on food	24
Pre-wash	Crockery to be washed later	13

① ON/OFF

S Salt level indicator

* Rinse aid level indicator

To reset

Press the programme buttons simultaneously to change the selected programmes.

Loading the dishwasher

- Before placing dishes in the machine, remove any scraps of food, to avoid clogging up the filters and reducing the appliance's performance.
- Do not load very small items that can fall through the baskets.
- The lower basket is designed to take saucepans, lids, plates, salad bowls, cutlery etc
- The upper basket is designed for small plates, cups and glasses etc

After loading the machine, ensure that the spray arms can rotate freely.

Use of detergent

- Use only detergents that are specifically designed for use in domestic dishwashers.
- Do not use excess detergent i.e. use only one tablet.
- Only fill the detergent dispenser PRIOR to starting a wash programme.

To add the detergent

- Locate the detergent dispenser on the inside of the machine door.
- Press the lever on the side of the dispenser, the cover will open automatically.
- Add the detergent.
- Close the dispenser by sliding the cover to the left and pressing slightly. The lever will lock.

Setting a programme to wash

1. Load the dishes and add the detergent. Ensure the detergent dispenser cover is closed and the spray arms can rotate freely.
2. Close the door.
3. Select the desired programme by pressing the corresponding button.
4. Press the ON/OFF button, the machine will start automatically.
5. To indicate the end of the programme the "END" light on the control panel will illuminate.
6. Wait until the "END" light is on before opening the door and turning off the dishwasher by pressing the ON/OFF button.

Note

Only open the dishwasher door during a programme if strictly necessary and exercise maximum caution as there is a danger of scalding from steam.