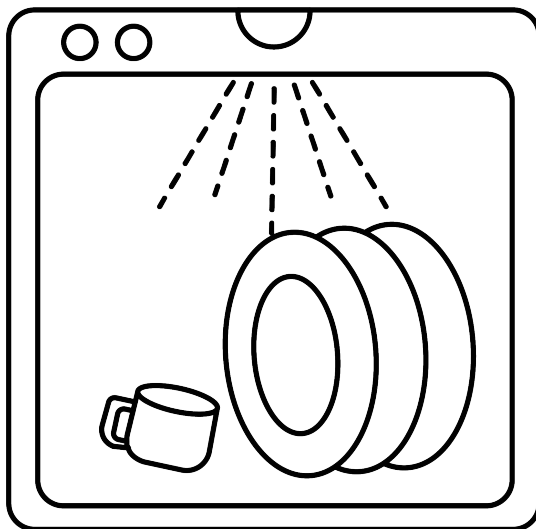 


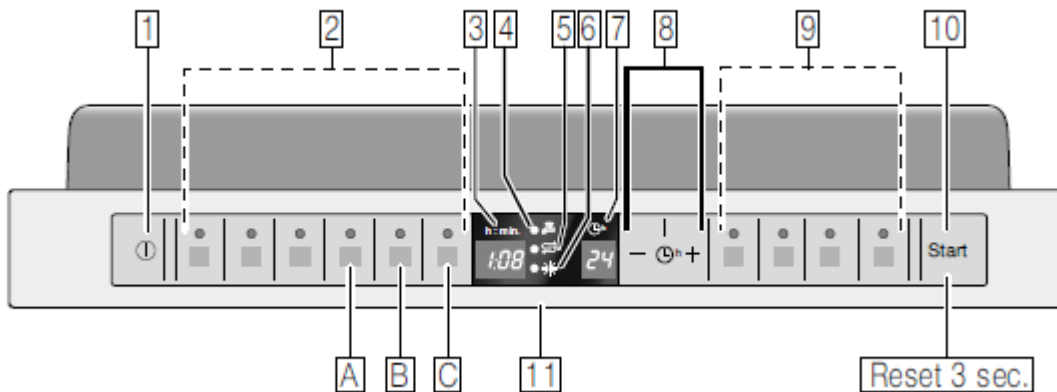 
Dishwasher

User's Manual



Operating Instructions - Dishwasher Siemens SX76T097

Control Panel



1. On/Off switch
 2. Programme buttons **
 3. Digital display
 4. Display "Check water supply"
 5. Salt refill indicator
 6. Rinse aid refill indicator
 7. Timer programming display
 8. Timer programming
 9. Additional options **
 10. Start button
 11. Door opener
- ** Number depending on model

Switching the dishwasher on

- Switch on ON/OFF switch.
- The Eco 50° programme display flashes. This programme remains selected if no other programme button is pressed. The expected programme duration flashes on the digital display.
- Press the Start button
- Close the door and the programme starts running.

Remaining running time display

When the programme is selected, the remaining running time of the programme is indicated on the digital display. The running time is determined during the programme by the water temperature, the number of utensils as well as the degree of soiling and may vary.

End of programme

The end of the programme is indicated by an acoustic signal and when the value 0:00 is displayed.

Switching the dishwasher off

Several minutes after the programme has ended, open the door and switch off the On/Off switch. Remove dishes when they have cooled down.

Interrupting the programme

- Open the door
- Switch off On/Off switch, the LEDs go out and the programme is saved.
- To continue the programme, switch on the On/Off switch again.
- Close the door.

Terminating the programme (Reset)

- Open the door and press the Start button for approx. 3 seconds. The numerical display displays **0:01**.
- Close the door. The programme sequence lasts approx. 1 minute.
- Open the door and switch off the On/Off switch before closing the door.

Changing the programme

When the Start button has been pressed, the programme cannot be changed. The only way a programme can be changed is by Cancel programme (Reset).

Intensive drying



 
 
 

 


The final rinse uses a higher temperature which improves the drying result. The running time may increase slightly.

- Open the door and switch on On/Off switch
- Hold down programme button A and press the Start button until **4:0** is indicated on the digital display.
- Release both buttons.

The LED for button A flashes and the digital display displays the factory setting **4:04**.

- Press programme button A until the factory set value **4:00** is indicated on the digital display.

Overview of programmes

Type of utensils	Type of soiling	Programme	Possible additional options	Programme sequence
pots and pans, non-sensitive utensils and cutlery	very adhesive burned-in or dried-on food remnants containing starch or protein	 Auto 65° - 75°	all	Is optimised according to the soiling with the aid of sensors.
		 Auto 45° - 65°	all	
mixed utensils and cutlery	part dried, common household food remnants	 Auto 45° - 65°		Is optimised according to the soiling with the aid of sensors.
		 / eco Eco 50°	all	Prerinse Clean 50° Intermediate rinse Final rinse 65° Drying
		 /  Quick 65°	Extra drying	Clean 60° Intermediate rinse Final rinse 65°
sensitive utensils, cutlery, temperature-sensitive plastic and glasses	slightly adhesive, fresh food remnants	 Auto 35° - 45°	IntensivZone Express Wash/ Speed Perfect (VarioSpeed) Half load Extra drying	Is optimised according to the soiling with the aid of sensors.
all types of utensils	cold rinsing, intermediate cleaning	 /  Prerinse	none	Prerinse