

Dishwasher

User manual

DISHWASHER

SIEMENS IQ300 - SR636D00MG

SWITCHING THE APPLIANCE ON

 
1. Turn on the tap fully.
2. Open the door.
3. Switch on On/Off switch (1). The Eco 50° programme display flashes.
4. Press the START button (7).
5. Close the door to start program.

RINSE AID


As soon as the rinse-aid refill indicator (5) is lit on the fascia, there is still a rinse-aid reserve of 1-2 rinsing processes. Refill with rinse aid. The rinse aid is required for stain-free utensils and clear glasses. Use only rinse aid for domestic dishwashers.

Combined detergents with rinse-aid component may be used up to a water hardness of 21° dH (37° fH, 26° Clarke, 3.7 mmol/l) only. If the water hardness is over 21° dH, rinse aid must be used.

- Open the dispenser (14) by pressing and lifting the plate on the cover.



 - Carefully pour rinse aid up to the maximum. Mark in the filler opening.



- Close cover until it clicks shut.
- To prevent excessive foam formation during the next rinse cycle, remove any rinse aid which has run over with a cloth.

SETTING THE AMOUNT OF RINSE AID

The amount of rinse aid dispensed can be set in 4 stages. Accordingly 0, 1, 2, or 3 displays are lit. Factory setting is 2.

CLEANING & CARE

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come.

 
OVERALL CONDITION OF THE MACHINE

Check spray arm for grease and limescale deposits.

If you find such deposits:


- Fill detergent dispenser with detergent. Start the appliance without utensils in the programme with the highest rinsing temperature.
- Clean the appliance with detergents/appliance cleaners.
- To extend the life of your appliance, clean the appliance regularly with a special dishwasher detergent.
- To ensure that the door seal always remains clean and hygienic, regularly clean it with a damp cloth and a little washing-up liquid.
- If the appliance is switched off for a prolonged period, leave the door ajar to prevent the formation of an unpleasant odour.

GETTING TO KNOW YOUR APPLIANCE

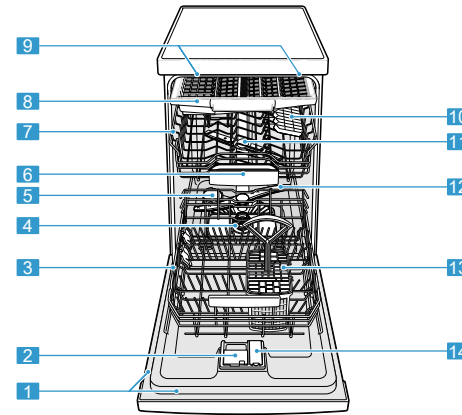

1. Rating panel
2. Detergent dispenser
3. Bottom basket
4. Filter system
5. Dispenser for special salt
6. Tablet collecting tray
7. Top basket
8. Cutlery drawer
9. EmotionLight
10. Etagera
11. Upper spray arms
12. Lower spray arm
13. Cutlery basket
14. Dispenser for rinse aid

 CONTROL PANEL

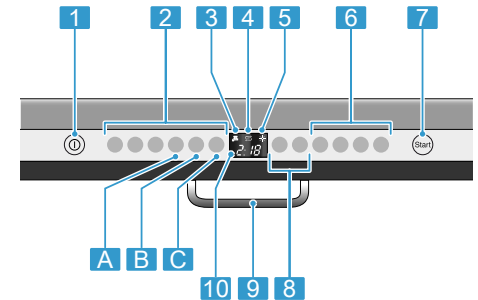

1. On/Off button
2. Programme buttons
3. Water supply display
4. Special salt refill indicator
5. Rinse aid refill indicator
6. Programme button and additional functions.
7. Start button
8. Timer programming
9. Door opener
10. Display