



Tricity Bendix Washer Dryer

User's Manual

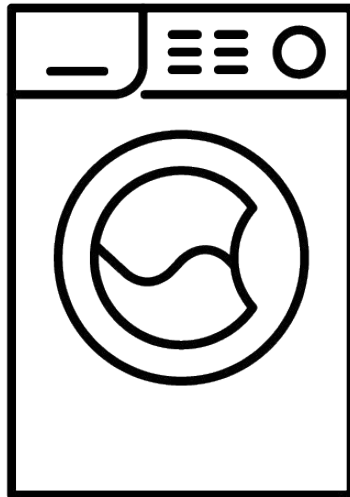


Description of the appliance

- 1** Detergent dispenser drawer
- 2** Control panel
- 3** Door opening handle
- 4** Drain pump
- 5** Adjustable feet

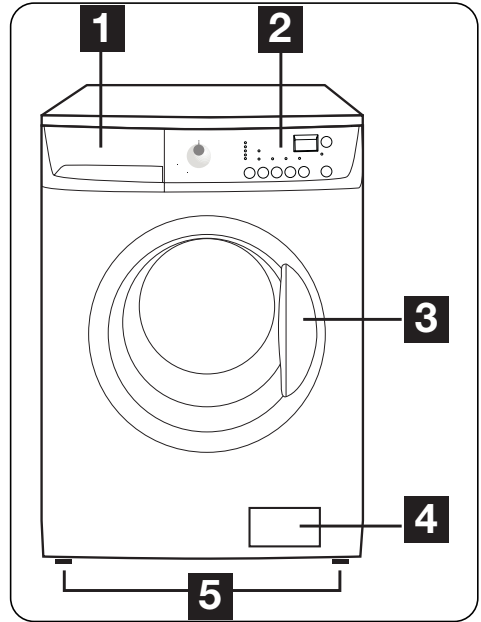

Detergent dispenser drawer

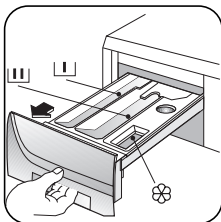


 Prewash

 Wash

 Fabric Softener

Control panel

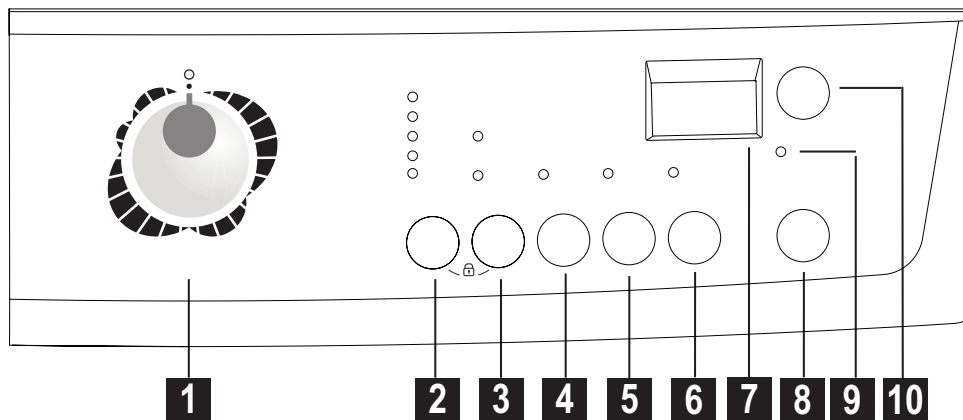

Control Panel key symbols:

= White/Coloured cottons,
 = Synthetics,
 = Delicates,
 = Drying sector
 = «Rinse Hold» option,
 = Rinses,
 = Drain,
 = Spin,
 = Child safety lock

Information

The control panel is illustrated above. It shows the programme selector dial as well as the different buttons, the pilot lights and the display. These are represented by relevant numbers which are explained in the table below.

1 Programme selector dial and On/Off switch	<ul style="list-style-type: none"> The programme selector dial allows you to select a programme and/or to switch the machine on/off. It can be turned either clockwise or anticlockwise. The light of button 8 starts to flash.
2 Spin reduction button	<ul style="list-style-type: none"> Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washer-dryer or to select the «Rinse Hold» function. The relevant light will light up.
3 Autodry button	<ul style="list-style-type: none"> By pressing this button you can choose the required degree of drying for cottons and synthetics between: Cupboard dry (cottons and synthetics) and Iron dry (cottons). The corresponding pilot light illuminates.

4	Drying Time button	<ul style="list-style-type: none"> By pressing this button you can select a timed drying for cotton or synthetics; the relevant light illuminates.
5	Super quick button	<ul style="list-style-type: none"> By pressing this button, the appliance performs a short cycle for lightly soiled items or for laundry which needs only freshening up; the relevant light illuminates. We recommend that you reduce the load.
6	Extra rinse button	<ul style="list-style-type: none"> By pressing this button, the machine performs some additional rinses; the relevant light illuminates
7	Display	<ul style="list-style-type: none"> The display shows the following information: duration of the selected programme, selected drying time, incorrect option selection, alarm codes, delay start, safety lock and the end of the programme.
8	Start/Pause button	<ul style="list-style-type: none"> This button allows you to start the selected programme; the corresponding green pilot light stops flashing. It also interrupts a programme which is running, the corresponding green pilot light starts to flash.
9	Door pilot light	<ul style="list-style-type: none"> This light illuminates when the appliance is working (after having pressed button 8) and indicates that the door is locked.
10	Delay start button	<ul style="list-style-type: none"> With this function, the wash programme can be delayed up to 20 hours to a more convenient time for you. The relevant light illuminates.

Display

The display (7) shows the following information:

Duration of the selected programme



After selecting a programme the **duration of the selected programme** appears on the dis-

play (e.g. 2.00).

During the programme, the time remaining is updated every minute.

After having pressed button **8**, the light **9** illuminates and stays on.

Drying time



After selecting a drying programme, the drying time is displayed in minutes or in hours and minutes (max 130 mins= 2.10).

After the programme has started the time remaining is updated every minute.


Delayed start



The **Delayed start** (up to 20 hours maximum) appears on the display for a few seconds, then the duration of the previously selected programme is displayed.


The delay time value decreases by one unit every hour and then, when 1 hour remains, every minute.

Incorrect option selection

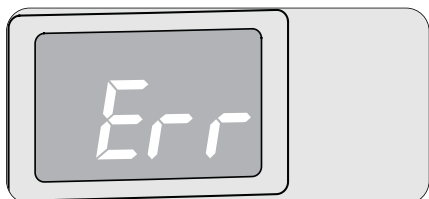


The **incorrect option selection** is indicated by the message **Err** displayed for a few seconds and by flashing of the red light button **8**.

Alarm codes

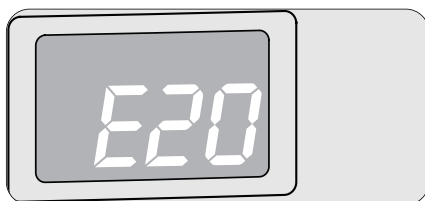

In the event of operating problems, some **alarm codes** can be displayed, (see paragraph «What to do if...»).

End of programme

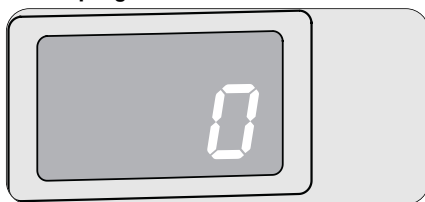

The **End of programme** is indicated by a flashing zero «0». The light **9** goes off and the door can be opened.

Child safety lock



This device permits you to leave the appliance unattended during its functioning.

Functions

Rinse hold (Button **2**)

By selecting this function, the machine will not drain the water of the last rinse to prevent the fabrics from creasing.

When the programme has finished, the light of the button **8** goes off, the display shows a flashing zero «0» but the light **9** is still on and the door still locked to indicate that the water must be emptied out.

To empty out the water see chapter «At the end of the programme».

Autodry (Button **3**)

By pressing this button you can choose the required degree of drying for cottons and synthetics between:

Cupboard dry (cottons and synthetics) and Iron dry (only cottons). The corresponding pilot light illuminates.

The drying time is automatically adjusted by the machine: the laundry will be dried to the selected degree of dryness.

Drying Time (Button **4**)

By pressing this button you can select a timed drying for cotton or synthetics.

For **Cottons** and **Synthetics** you can select a drying time from 10 minutes to 130 minutes (2.10).

Every time you press the button the time increases by 5 mins.

Super quick (Button **5**)

By pressing this button you can decrease the duration of the washing cycle to adapt it to lightly soiled items or to laundry which needs only freshening up.

We recommend that you reduce the load.

Extra Rinse (Button **6**)

The machine performs some additional rinses during the washing cycle. This option is recommended for people who are allergic to detergents, and in areas where the water is very soft.

Door pilot light (**9**)

After having pressed the button **8**, this light illuminates and stays on.

This light indicates when the door can be opened:

- **light 9 on**: the door is locked and **cannot** be opened. The appliance is working.
- **light 9 off**: the door can be opened. The washing programme has finished.

Delay start (Button **10**)

The wash programme can be delayed from 30 min - 60 min - 90 min, 2 hours and then by 1 hour up to a maximum of 20 hours.

The Delay start cannot be selected with «Drain» programme.

Programme table


 
Programme/ Temperature	Type of laundry	Options	Description of programme
Cottons 90° - 60°	White cotton (heavily soiled cotton items)	Spin red./Rinse hold Super Quick, Extra rinse	Main wash, Rinses Long spin Max. load kg: 6 (*Reduced load: kg 3)
Cottons 60° eco	White and fast colour cotton (normally soiled cotton items)	Spin red./ Rinse hold Extra rinse	Main wash, Rinses Long spin Max. load kg. 6
Cottons 60° - 40° - 30°	White and colour cotton (heavily soiled cotton items)	Spin red./ Rinse hold Super Quick, Extra rinse	Main wash, Rinses Long spin Max. load kg: 6 (*Reduced load: kg 3)
Cottons + Prewash 90° - 60° - 40°	White and fast colour cotton (white and colour cotton items heavily soiled)	Spin red./ Rinse hold Super Quick, Extra rinse	Prewash, Main wash Rinses, Long spin a Max. load kg. 6 (*Reduced load: kg 3)
Synthetics 60° - 40° - 30°	Synthetic or mixed fabrics	Spin red./ Rinse hold Super Quick, Extra rinse	Main wash Rinses Short spin Max. load kg. 3 (*Reduced load: kg 1.5)
Synthetics Easy iron 40°	Synthetic or mixed fabrics to be gently washed and spun.	Spin red./ Rinse hold Extra rinse	Main wash, Rinses Short spin Max. load kg. 1
Delicates 40° - 30°	Delicate fabrics , for example curtains.	Spin red./ Rinse hold Super Quick, Extra rinse	Main wash, Rinses Short spin Max. load kg. 3 (*Reduced load: kg 1.5)

(*) If you select the option Super quick, we recommend that you reduce the load sizes given in the table above.

Programme table

Programme/ Temperature	Type of laundry	Options	Description of programme
Handwash 40° - 30° - Cold	Special programme for hand washing fabrics	Spin red./ Rinse hold	Main wash, Rinses Short spin Max. load kg 2
Jeans 40°	Special programme for jeans or dark colours cotton items	Spin Red., Rinse Hold,	Main wash Rinses Long spin Max. load: kg 3
Sport Intensive 40°	Special programme for heavily soiled sportswear items	Spin Reduction, Rinse Hold, Extra Rinse	Prewash, Main wash Rinses Short spin Max. load: Kg 2.5
Rinses	Separate rinse cycle for hand washed cotton items.	Spin Reduction/ Rinse hold Extra rinse	3 rinses Long spin Max. load kg. 6
Drain	For emptying out the last rinse water in programmes with the Rinse Hold option.		Draining of water
Spin	Separate spin for cottons.	Spin red.	Drain and long spin at the maximum speed Max. load kg. 6
O	To interrupt a running programme, to cancel an incorrect selected programme or to switch the machine off.		

Programme information

Cottons Eco	This programme can be selected for slightly or normally soiled cotton items. The temperature will decrease and the washing time will be extended. This allows you to obtain a good washing efficiency by saving energy.
(Wool) Handwash	Washing programme for machine washable wool as well as for hand washable woollens and delicate fabrics with the «hand washing» care symbol  .
Easy Iron	Selecting this programme, the laundry is gently washed and spun to avoid any creasing. In this way ironing is easier. Furthermore the machine will perform additional rinses.
Sport Intensive	This programme is suitable for washing heavily soiled sport items. The machine will automatically add a prewash phase before the main wash to eliminate mud stains. We recommend that you do NOT put the detergent into the compartment  of the detergent drawer.
Jeans	With this programme it is possible to wash free time items as pants, shirts or jackets and also jerseys made of hi-tech materials. The machine will perform some extra rinses.
Rinses	With this programme it is possible to rinse and spin cotton garments which have been washed by hand. The machine performs 3 rinses, followed by a final spin at maximum speed. The spin speed can be reduced by pressing button 2 .
Drain	For emptying out the water of the last rinse in programmes with the Rinse Hold option. Firstly, turn the programme selector dial to « O », then select programme Drain and press button 8 .
Spin	Separate spin for hand washed garments and after programmes with Rinse Hold option. Before selecting this programme the selector dial must be turned to « O ». You can choose the speed by means of the relevant button to adapt it to the fabrics to be spun.
O = Cancelling/Off	To reset a programme and to switch off the machine turn the selector dial to « O ». A new programme can now be selected.

Washing and drying hints

Sorting the laundry

Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens.

Temperatures

90° or 95°	for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets...)
50°/60°	for normally soiled, colour fast garments (e.g. shirts, night dresses, pyjamas...) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear).
30°-40°-Cold	for delicate items (e.g. net curtains), mixed laundry including synthetic fibres and woollens bearing the label «pure new wool, machine washable, non-shrink».

Before loading the laundry

Never wash whites and coloureds together. Whites may lose their «whiteness» in the wash.

New coloured items may run in the first wash; they should therefore be washed separately the first time.

Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins). Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.

Remove persistent stains before washing. Rub particularly soiled areas with a special detergent or detergent paste.

Treat curtains with special care. Remove hooks or tie them up in a bag or net.

Avoid drying dark clothes with light coloured fluffy items such as towels as these can attract the fluff.

Remove the laundry when the appliance has finished drying.

To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.

Particularly delicate items such as synthetic curtains, woollen and silk, garments with metal inserts, nylon stockings, bulky garments such as anoraks, bedcovers, quilts, sleeping bags and duvets must not be machine dried.

Garments padded with foam-rubber or materials similar to foam-rubber must not be machine dried; they represent a fire hazard.

Also, fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours.

For drying, follow the indications given on the manufacturer's labels.

For drying, follow the indications given on the manufacturer's labels.

- May be tumble dried
- Drying at high temperature
- Drying at reduced temperature
- Do not tumble dry

IMPORTANT!

As a dryer, the machine works on the condensation principle.

Therefore, the water tap must be open and the drain hose must drain water into a sink or into the drain pipe, even during the drying cycle.

Maximum loads

Recommended loads are indicated in the programme charts.

General rules:

Cotton, linen: drum full but not too tightly packed;

Synthetics: drum no more than half full;

Delicate fabrics and woollens: drum no more than one third full.

Washing a maximum load makes the most efficient use of water and energy.

For heavily soiled laundry, reduce the load size.

Laundry weights

The following weights are indicative:

bathrobe	1200 g
napkin	100 g
quilt cover	700 g
sheet	500 g
pillow case	200 g
tablecloth	250 g
towelling towel	200 g
tea cloth	100 g
night dress	200 g
ladies' briefs	100 g
man's work shirt	600 g
man's shirt	200 g
man's pyjamas	500 g
blouse	100 g
men's underpants	100 g

Removing stains

Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing.

Blood: treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water.

Oil based paint: moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times.

Dried grease stains: moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth.

Rust: oxalic acid dissolved in hot water or a rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole.

Mould stains: treat with bleach, rinse well (whites and fast coloureds only).

Grass: soap lightly and treat with bleach (whites and fast coloureds only).

Ball point pen and glue: moisten with acetone (*), lay the garment on a soft cloth and dab the stain.

Lipstick: moisten with acetone as above, then treat stains with methylated spirits. Remove any residual marks from white fabrics with bleach.

Red wine: soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach.

Ink: depending on the type of ink, moisten the fabric first with acetone (*), then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly.

Tar stains: first treat with stain remover, methylated spirits or benzine, then rub with detergent paste.

(*) do not use acetone on artificial silk.

Detergents and additives

Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment. Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature.


The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling.


All commonly available washer-dryer detergents may be used in this appliance:

- powder detergents for all types of fabric,
- powder detergents for delicate fabrics (60°C max) and woollens,
- liquid detergents, preferably for low temperature wash programmes (60°C max) for all types of fabric, or special for woollens only.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme.

If using concentrated powder or liquid detergents, a programme **without** prewash must be selected.

Pour liquid detergent into the dispenser drawer compartment marked  **just before** starting the programme.

Any fabric softener or starching additives must be poured into the compartment marked  before starting the wash programme.

Follow the product manufacturer's recommendations on quantities to use and **do not exceed the «MAX» mark in the detergent dispenser drawer.**

Quantity of detergent to be used

The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used.

Water hardness is classified in so-called «degrees» of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company.

Follow the product manufacturers' instructions on quantities to use.

Degrees of water hardness

Follow the product manufacturers' instructions on quantities to use.

Use less detergent if:

- you are washing a small load,
- the laundry is lightly soiled,
- large amounts of foam form during washing.

Level	Characteristic	Degrees	
		German °dH	French °T.H.
1	soft	0-7	0-15
2	medium	8-14	16-25
3	hard	15-21	26-37
4	very hard	> 21	> 37

Before the first use


WARNING!

Ensure that the electrical and water connections comply with the installation instructions.

IMPORTANT!

Remove the polystyrene block and any material from the drum.

IMPORTANT!



Pour 2 litres of water into the main wash compartment  of the detergent drawer in order to activate the ECO valve. Then run a cotton cycle at 95° or 90°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the main compartment of the dispenser drawer and start the machine.




Child safety lock

This device permits you to leave the appliance unattended without having the worry that children might be injured by or cause damage to the appliance.

This function remains enabled also when the washer-dryer is not working.

There are two different ways to set this option:



- **before pressing** button : it will be impossible to start the machine.
- **after pressing** button  it will be impossible to change any other programme or option.

To enable (disable) this option press buttons  and  simultaneously for about 6 seconds until the icon  appears (disappears) on (from) the display.

Acoustic signals


The machine is provided with an acoustic device, which sounds in the following cases:

- at the end of the cycle
- in the event of operating problems

By pressing the  and  buttons simultaneously for about 6 seconds, the acoustic signal is deactivated (except in the events of operating problems).

By pressing the same buttons again, the the acoustic signal is reactivated.



Operating sequence - Washing

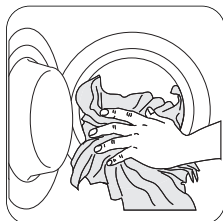




1. Load the laundry
Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as

possible. Close the door.

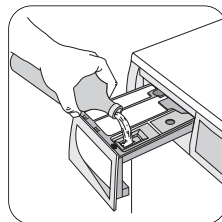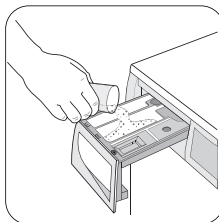2. Measure out the detergent and the fabric softener



Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment  and, if you wish to carry out a programme with the prewash phase, pour it into the compartment marked .

If required, pour fabric softener into the compartment marked  (the amount used must not exceed the «MAX» mark in the drawer). Close the drawer gently.

Select the required programme by turning the programme selector dial (1)

Turn the programme selector dial to the required programme. The green light of button **8** starts to flash.

It can be turned either clockwise or anticlockwise. On position «O» the programme is reset and the machine is switched OFF.

At the end of the programme the selector dial must be turned to position «O», to switch the machine off.

IMPORTANT!

If you turn the programme selector dial to another programme when the machine is working, the red light of the button **8** flashes 3 times and the message **Err** is displayed on the display to indicate a wrong selection. The machine will NOT perform the new selected programme.

Select the spin speed or the Rinse Hold option by pressing button **2**

When selecting a programme, the light corresponding to the maximum speed allowed for that programme will illuminate (refer to the section «Programme table» for the maximum allowed spin speed).

Select the degree of dryness or the duration of the drying cycle by pressing buttons **3** and **4**

By pressing button **3** it is possible to select an automatic degree of dryness for cotton or synthetics items. The washer dryer will automatically adjust the duration of the drying cycle to the selected degree. The relevant light illuminates.

Also, the button **4** allows you to select a drying time for **Cottons** and **Synthetics** from 10 minutes to 130 minutes (2.70). Every time you press this button the time increases by 5 mins.

Select the desired option by pressing buttons **5** and **6**

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the button **8**.

For the compatibility of the options with the washing programmes, refer to the section «Programme table».

Select the delayed start by pressing the button **10**

Press this button to select the required delay. The selected delay time value will appear on the display for a few seconds, then the duration of the programme will appear again.

You must select this option after you have set the programme and before you press button **8**.

You can cancel the delay time at any moment, before you press button **8**.

If you have already pressed it, and you wish to cancel the delay time, proceed as follows:

- set the machine to PAUSE by pressing button **8**;
- press button **10** once. On the display will appear the symbol «D».
- press button **8** again to start the programme.

IMPORTANT!

- If the programme has already started, the selected delay can be modified only after you have turned the programme selector dial to the «O» position and after you have selected the programme again.
- The door will be locked throughout the delay time. If you need to open the door, you must first set the washer dryer to PAUSE by pressing button **8**. After you have closed the door, press the same button again.

Note!

The Delay Start cannot be selected with «Drain» programme.

Start the programme by pressing button **8**

To start the selected programme, press this button; the corresponding green pilot light stops flashing. The appliance starts operating and the door is locked.

To interrupt a programme which is running, press button **8**: the green pilot light starts to flash.

To restart the programme from the point at which it was interrupted, **press** button **8** **again**.

If you have chosen a delayed start, the machine will begin the countdown.

IMPORTANT!

If an option which is not compatible with the set wash programme is selected, the message **Err** is displayed for a few seconds and the **red** light of this button flashes 3 times.

Altering an option or a running programme

It is possible to change some options before the programme carries it out.

Before you make any change, you must pause the machine by pressing button **8**.

Changing a running programme is possible only by resetting it. Turn the programme selector dial to «O» and then to the new programme position. Start the new programme by pressing button **8** again.

The washing water in the tub will not empty out.

Interrupting a programme

Press button **8** to interrupt a programme which is running, the corresponding light starts to flash. Press this button again to restart the programme.

Cancelling a programme

Turn the selector dial to «O» to cancel a programme which is running. You can now select a new programme.

Opening the door after the programme has started

First set the machine to pause by pressing button **8**.

If the light **9** goes off, the door can be opened. If this light doesn't go off and the door remains locked, this means that the machine is already heating, that the water level is above the bottom edge of the door.

If you cannot open the door but you need to open it you have to switch the machine off by turning the selector dial to «O». After a few minutes it will be possible to open the door (**Pay attention to the water level and temperature!**).

After this procedure, it will be necessary to set the programme and the options again and then to press button **8**.

At the end of the programme

The washer-dryer stops automatically. Some acoustic signals sound and on the display will appear a flashing «U». The button **8** light and the light **9** go off. The door can be opened.

If, at the end of a programme, there is water in the tub, (the light **9** still on) **to empty out** the water follow the following instructions:

To empty out the water proceed as follows:

1. turn the programme selector dial to «**O**»
2. select the **Drain**» or «**Spin**» programme
3. reduce the spin speed, if needed, by pressing button **2**
4. press button **8**
5. at the end of the programme, the display shows «**0**», the light **9** goes off. It will be possible now to open the door.

Turn the programme selector dial to «**O**» to switch the machine off.

Remove the laundry from the drum and carefully check that the drum is empty.

If you do not intend to carry out another wash, close the water tap.

Leave the door open to prevent the formation of mildew and unpleasant smells.

Operating sequence - Drying only

The max load to dry in your washer -dryer is 3 kg for cotton and 2 kg for synthetics.

The water tap must be open and the drain hose must be positioned in the sink or connected to the drain pipe.

1. Load the laundry.
2. Turn the selector dial to «**Cottons**» or «**Synthetics**» programme in the «Drying» section.
3. If you wish to select the automatic drying (**Cupboard dry** or **Iron dry**), press button **3** until the light corresponding to the desired dryness degree for synthetics or cotton illuminates.
4. If you wish to select a **timed drying**, press button **4** until the time you want appears on the display (see the drying programmes).

Note!

The drying time will automatically increase by up to 2 minutes. This is quite normal.

5. Press button **8** to start the programme. After the programme has started, the time remaining is updated every minute.

6. At the end of the programme, the buzzer sounds. A flashing zero «**0**» appears on the display. The last 10 minutes of the drying cycle correspond to an anti-crease phase. During this time the door is locked and the display keeps showing the flashing zero «**0**».

Note!

If you wish to open the door before or during the anti-crease phase or to interrupt it, press any button or turn the programme selector dial to any programme position (except «**O**»), the door can be immediately opened.

7. Turn the selector dial to the «**O**» position to switch the machine off. Remove the laundry.

Autodrying (NON-STOP programme)

Warning!

For NON-STOP programmes, it is essential not to exceed the maximum load sizes of 3 kg for cotton and 2 kg for synthetics.

Do not use a dosing device/ball when carrying out a washing & drying programme.

1. Load the laundry.
2. Add detergent and fabric softener.
3. Switch the machine on by turning the selector dial to the selected wash programme/fabric.
4. Select the required options by pressing the relevant buttons.

Warning!

If possible, do not select a spin speed lower than that proposed by the appliance to avoid a too long drying time so saving energy.

In any case the reduction of the spin speed is only possible after selecting drying.

The lowest value **with automatic drying** for cottons and synthetics is 900 r.p.m. .

The lowest value **with timed drying** you can select for synthetics is 700 r.p.m.

5. Select the drying time or a dryness degree by pressing buttons **3** or **4** (see the drying programmes). The display shows the entire duration of the washing and the selected drying cycle.
6. Start the programme by pressing button **8**. After the programme has started, the time remaining on the display is updated every minute.

At the end of the drying cycle, the buzzer sounds. A flashing zero «0» appears on the display.

At this point of the programme, starts an anti-crease phase which lasts about 10 minutes. During this time the door is locked and the display keeps showing the flashing zero «0».

(If you wish to open the door before or during the anti-crease phase, please follow the instructions given in the previous chapter).

7. Turn the selector dial to the «0» position to switch the machine off.
8. Remove the laundry.

Drying programmes

Degree of drying	Type of fabric	Max Load	Spin speed	Drying time mins
Extra dry(*) Ideal for towelling materials	Cotton and linen (bathrobes, bath towels, etc)	3 kg	1200 rpm	100
		1.5 kg	1200 rpm	60
Cupboard dry(**) Suitable for items to put away without ironing	Cotton and linen (bathrobes, bath towels, etc)	3 kg	1200 rpm	90
		1.5 kg	1200 rpm	50
	Synthetics and mixed fabrics (jumpers, blouses, underwear, household linen)	2 kg	900 rpm	75
		1 kg	900 rpm	40
Iron dry Suitable for ironing	Cotton and linen (sheets, tablecloths, shirts, etc.)	3 kg	1200 rpm	75
		1.5 kg	1200 rpm	45

(*) It is possible to obtain the «Extra dry» degree of dryness **only** with the timed drying.

(**) The **Cupboard dry** drying programme for «**Cottons**» is the reference programme for the Energy Label data, in compliance with EEC directive 92/75.