


# Operating Instructions – Washer Dryer Whirlpool A WG329 1100

## Control Panel

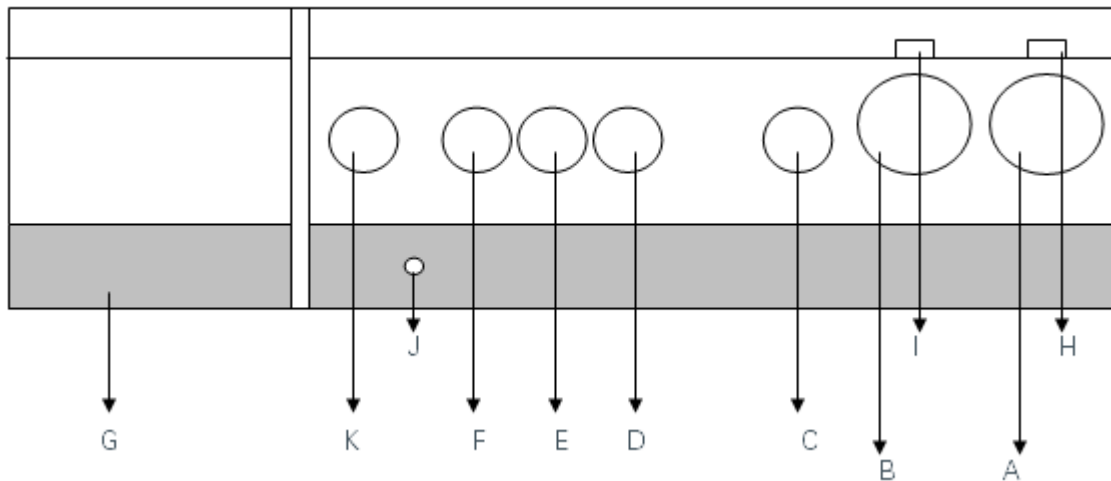

- A. Programme selector knob
- B. Temperature knob
- C. Spin RPM selection dial
- D. Additional rinse - intensive rinse push button
- E. Economy programme – Energy save push button
- F. ON/OFF push button
- G. Automatic detergent dispenser
- H. Programme pointer
- I. Temperature index
- J. Operating indicator light
- K. Drying time knob

Programme selector knob:

Allows the wash programme to be chosen by turning the knob clockwise until the marker on the control panel aligns with the desired programme.

Temperature knob:

This is needed to choose washing temperatures from 30°C to 90°C.

Spin RPM Selection knob:

This is used to select the final spin, stopping with a full tub, or only draining off the water. To automatically end washing programmes with the spin, position the dial pointer on the desired speed.

Washing powder distributor:

The removable drawer to the left of the control panel. The dispenser is formed by three compartments with numbers «1» and «2» being for pre wash and detergent respectively.

Drying time knob:

This is used to choose the drying time up to a maximum of 120 minutes. Turn the knob clockwise to select the desired time.

Using the Machine








- Prepare the laundry.
- Door opening - the machine has been fitted with a safety device that prevents the door from opening while a program is in operation. To open the door, turn the temperature start/stop dial onto its 0 position and wait for 1-2 minutes to allow the safety device to disconnect.
- Load the laundry.
- Add detergent and fabric softener if required.
- Turn the programme selector dial clockwise until the desired programme is aligned with the programme pointer.
- Select any additional wash features by pressing the desired buttons, i.e. energy save button.
- Start the machine.

To dry

- Turn temperature selector knob onto position 0.
- Select the time by turning the drying time knob.
- Turn the programme dial to coincide with the drying symbols \*.
- Open the water tap and turn the start, stop, and temperature dial onto the «|» symbol to begin the drying cycle.

Programme selector guide

Types of fabric of washing programme	Programmes	Temperature	Max. recommended load (kg)	Detergents			Push Buttons			Description of washing cycle	
				Pre washing detergent	Washing detergent	Additive (optional)	ON/OFF	Economy programme	Additional rinse		
Energetic programmes for cotton, linen, or hemp fabrics	Exceptionally dirty laundry	1	90°	4	1	2	☼	•	-	○	Pre wash at 30°C, wash at 90°C, rinses and adjustable desired spin speed
	Very dirty resistant colours	1	60°	4	1	2	☼	•	-	○	Pre wash at 30°C, wash at 60°C, rinses and adjustable desired spin speed
	Normally dirty laundry	2	90°	5	-	2	☼	•	-	○	Wash at 90°C, rinses and adjustable desired spin speed
	Normally dirty resistant colours	3	60°	5	-	2	☼	•	•	○	Economy wash at 60°C, rinses adjustable desired spin speed
	Slightly soiled resistant colours	3	60°	4	-	2	☼	•	-	○	Wash at 60°C, rinses adjustable desired spin speed (fast programme)
	Normally dirty delicate colours	4	40°	5	-	2	☼	•	•	○	Economy wash at 40°C, rinses adjustable desired spin speed
	Slightly soiled delicate colours	4	30° 40°	4	-	2	☼	•	-	○	Wash at 30°C or 40°C, rinses and adjustable desired spin speed (fast programme)
	Very dirty laundry	1	60°	5	1	2	☼	•	•	○	Pre wash at 35°C, economy wash at 90°C, rinses and adjustable desired spin speed
	Quick wash	5	1	5	-	-	-	•	-	○	Fast and cold wash, 2 or 3 rinses (if the additional rinse button is pressed) and adjustable desired spin speed
	Quick wash with fabric conditioner	5	1	5	-	-	☼	•	-	○	Fast and cold wash, 2 or 3 rinses (if the additional rinse button is pressed) and adjustable desired spin speed
	Softener	6	1	5	-	-	☼	•	-	○	1 rinse with fabric conditioner and adjustable desired spin speed
	Drain and spin	7	1	5	-	-	-	•	-	○	Only drain, or drain and adjustable final desired spin speed

Types of fabric of washing programme		Programmes	Temperature	Max. recommended load (kg)	Detergents			Push Buttons			Description of washing cycle
					Pre washing detergent	Washing detergent	Additive (optional)	ON/OFF	Economy programme	Additional rinse	
Delicate programmes for mixed or artificial synthetic fibres	Normally dirty delicate synthetics	8	60°	2.5	-	2		•	-	-	Wash at 60°C, rinses, stop with full tub, or only drain, or drain and spin at 500 or 900 rpm
	Normally dirty delicate synthetics	8	50°	2.5	-	2		•	-	-	Wash at 50°C, rinses, stop with full tub, or only drain, or drain and spin at 500 or 900 rpm
	Normally dirty delicate synthetics	8	40°	2.5	-	2		•	-	-	Wash at 40°C, rinses, stop with full tub, or only drain, or drain and spin at 500 or 900 rpm
	Slightly soiled delicate synthetics	8	30° 40°	2	-	2		•	-	-	Wash at 30°C or 40°C, rinses, stop with full tub, or only drain, or drain and spin at 500 or 900 rpm (fast prog.)
	Washable clothes to freshen	8	30° 40°	2.5	-	2		•	-	-	Wash at 30°C or 40°C, rinses, stop with full tub, or only drain, or drain and spin at 500 or 900 rpm (fast prog.)
	Curtains	8	30° 40°	-	1	2		•	-	-	Wash at 30°C or 40°C, rinses, stop with full tub, or only drain, or drain and spin at 500 or 900 rpm
	Delicate rinses	9	□	3	-	-		•	-	-	3 rinses with fabric conditioner, stop with full tub, or only drain, or drain and spin at 500 or 900 rpm
	Softener	10	□	3	-	-		•	-	-	1 rinse with fabric conditioner, stop with full tub, or only drain, or drain and spin at 500 or 900 rpm
	Drain and short spin	5	□	-	-	-	-	•	-	-	Drain and spin at 500 or 900 rpm
Wool & Silk	Wool & Silk	11	30°	□	-	2		•	-	-	Wash at 30°C, stop with full tub, or only drain, or drain and adjustable spin from 500 to 1000 rpm
	Softener	12	□	1	-	-		•	-	-	1 rinse with fabric conditioner, stop with full tub, or only drain, drain and adjustable spin from 500 to 1000 rpm
	Drain and short spin	S	□	-	-	-	-	•	-	-	Only drain, or drain and adjustable spin from 500 to 1000 rpm