



Washer Dryer

User's Manual

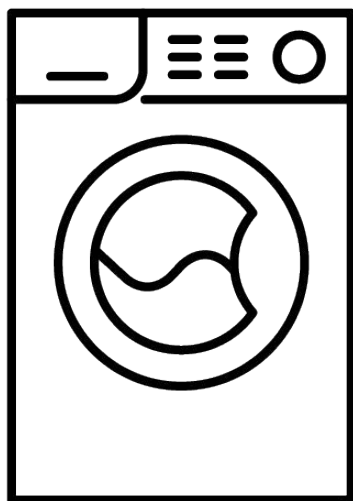

Operating Instructions – Washer Dryer Siemens WDi442GB

Control Panel

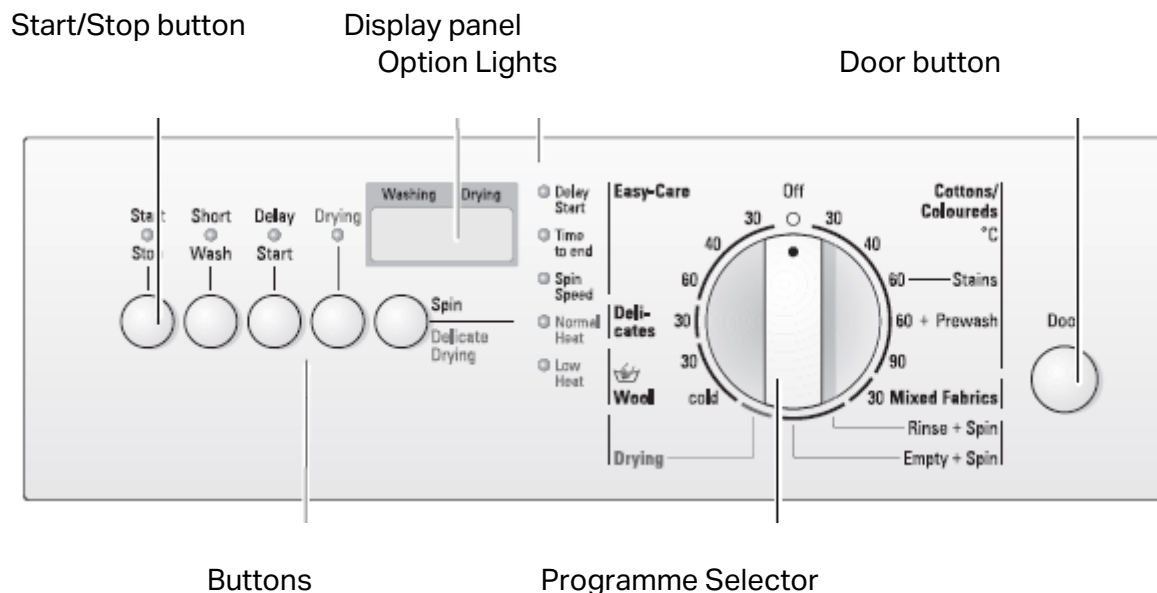

Programme selector

The programmes are set using the programme selector. This can be turned in either direction. The programme selector must not be set to intermediate positions between the indicated programmes.

Washing programmes

Cottons/Coloureds 30, 40, 60, 90 °C - Intensive washing programmes for hard-wearing cottons, coloured garments or linen

Cottons/Coloured + Prewash 60°C - For heavily soiled laundry with stains, and for work clothes/overalls

Mixed Fabrics 30°C - Time optimised programme for lightly soiled cotton textiles and easy-care textiles. Different types of washing can be washed together. (Wash white and coloured items separately and do not wash new coloured washing with other washing). Short washing time and reduced spin speed.

Easy-Care 30, 40, 60°C - For delicate synthetic fibres, blends or linen fabrics. Prevents creasing, reduced spin speed.

Delicates 30°C - For delicate, washable textiles e.g. silk, satin, synthetic materials or blended fabrics. Delicates cycle at 30°C for hand and machine washable silk. Reduced spin speed

Wool cold 30°C - Low heat (delicates) washing programme for machine-washable wool fabrics. Wash other wool types by hand or have them dry-cleaned. Reduced spin speed.

Drying programmes

Normal Heat - for resistant fabrics, white and coloured cottons and linens

Low Heat - for delicate fabrics (Easy-care drip-dry laundry, such as synthetics and fabric blends)

To spin warm laundry is more effective than spinning cold laundry. Therefore there is a special spin cycle integrated in the drying programme. The spin option is only possible for drying times ranging from 1hr to 2hr.

Special programmes

Rinse & Spin

For an additional rinse cycle turn the programme selector to Rinse+Spin. Select the required spin speed. If the laundry is to be removed dripping wet, set the spin speed to 000 prior to starting this programme.

Start/Stop button Press this button to start the selected programme. The start/Stop LED is constantly on from the start of the programme until the end.

Pausing the programme Press the Start/Stop button while the programme is running and keep it pressed until STOP appears in the display (approx. 3 seconds). While the programme is paused the LED Start/Stop flashes, with STOP and - - - alternating in the display. To resume the programme, press the Start/Stop button again.

Stopping the programme Press the Start/Stop button while the programme is running, and keep it pressed (approx. 8 seconds) until 0000 appears in the display.

Short Wash button This button reduces the overall duration of the programme cycle (washing, rinsing, spinning). This function is suitable for washing similar loads or lightly soiled items in a shorter time. Not suitable for programmes with pre-wash, not possible with wool and delicates.

Delay Start button You can set a delay period, in hours, before the programme is to start. Press the Delay button repeatedly until the required number of hours is displayed. After setting the delay time, press the Start/Stop button. The delayed start time countdown begins. The delay LED lights up while the delay time is selected and remains on until the programme starts. The delay LED monitor flashes. Once the set delay period has passed, the selected programme begins.

Changing the Delay time setting Press the Delay button repeatedly until the required time is displayed

Cancelling the Delay time Press the Delay button for approx. 3. secs

Opening the door The door can be opened during the delayed start time countdown e.g. to add additional items for washing.

Drying button

Press the button the required drying time, maximum 2:00 hours, is shown in the display. Press the button repeatedly to reduce the drying time.

Reset Drying time Press the Drying button for approx. 3 secs.

The Normal Heat LED lights up. Intensive drying programme for cotton and linen fabrics.

The Low Heat LED lights up. Delicate drying programme for synthetics and delicate fabrics.

Guide values for drying times and temperatures – Garments may shrink or crease if dried for too long.

Washing load	Hard-wearing fabrics	Easy-care fabrics	Drying result
1.5 kg	40 minutes	80 minutes	Damp for ironing
	80 minutes	100 minutes	Dry
2.5 kg	80 minutes	120 minutes	Damp for ironing
	100 minutes	–	Dry

Delicate drying button – Press the button to set low heat or normal heat. After selection of a drying programme, also press the Drying button within approx. 5 seconds.

Combination of Washing and Drying Programmes

Drying programmes	Cottons/ Coloureds Mixed Fabrics	Easy-Care Delicates	Wool	Dry-only
Normal Heat	✓	–	–	✓
Low Heat	✓	✓	–	✓

Spin button Press the button repeatedly to select the required spin speed

The following spin speeds are available:

000 rpm: Spin disabled and stop with tub full. The washer dryer does not perform the final spin and ends the washing programme with water in the tub.

From 600 to 1400 rpm: For cotton and coloured programmes, speed decreases by 100 rpm starting from max 1400 down to 600 rpm

From 600 to 900 rpm: For synthetics, delicates and woollens programmes, speed decreases by 100 rpm starting from 900 down to 600 rpm. The indicator LED lights up while the spin speed is being selected.

Cancelling decreased spin speed

Press the Spin button for approx. 3 seconds. The maximum spin speed in accordance with the programme is shown in the display. Drying times depend on the spin speed: the higher the speed the lower the drying time and consequently the lower the power consumption. Choose the highest spin speed compatible with the type of laundry.

Washing and Drying

This machine allows wash-only, dry-only and wash+dry programmes to be set. In the wash+dry programmes, the cycle shifts automatically from washing to drying without having to touch the controls to continue the cycle after washing.

Setting the complete washing & drying programme

- Select the washing programme
- Select the required spin speed
- Press the Drying button repeatedly until the required time is set
- Press the Delicate Drying button to set low heat if desired
- Drying LED monitor lights up. The display alternates between the remaining time and the selected spin speed.
- Press the Start/Stop button. One of the display LEDs (Normal Heat or Low Heat) lights up. The remaining time is displayed during washing and drying.

Pausing the programme

- The washing & drying can be paused at any time during the cycle.
- Press the Start/Stop button for approx. 3 secs. The display alternates between STOP and - - -. The Start/Stop LED flashes.
- Continuing the programme: Press the Start/Stop button again.

Cancelling the programme

- Press the Start/Stop button during the programme cycle and keep pressed until 0000 appears in the display (approx. 8 seconds)

Changing the washing programme

- Turn the programme selector. Select the new programme, but do not set to Off. The display alternates between STOP and - - -. The Start/Stop LED flashes.
- Press the Drying button repeatedly until the required drying time is set.
- Press the Delicate Drying button if desired.
- Starting the new programme: Press the Start/Stop button.

End of programme

The washing and drying programmes finish automatically. End appears in the display, and the Time to end LED lights up.

- Turn the programme selector to Off.
- Remove the washing
- Leave the door open to allow the inside of the washer dryer to dry out

Without final spin

At the end of the wash cycle, the spin speed was set to 000. The washing is held in the last rinse water.

At the end of the washing programme the display alternates between STOP and 000 (Spin speed 0). The Spin LED lights up.

Set the programme selector to Empty+Spin

Press the Start/Stop button. The water is drained away. The washer dryer does not spin. The programme has ended when END appears in the display.

Remove the dripping wet washing

Or

- Set the programme selector to Empty+Spin
- Press the Spin button repeatedly until the required spin speed is set
- Press the Start/Stop button
- The water is drained away; the washer dryer spins. The programme has ended when END appears in the display.
- Remove the laundry
- Leave the door open to allow the inside of the washer dryer to dry out.