


Washer Dryer

User's Manual

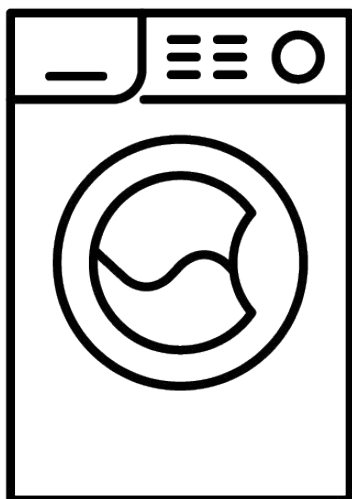

Operating Instructions – Washer Dryer CDA CI925

Preparing garments for washing

- Before placing the clothes in the drum, make sure all pockets are empty.
- Sort the clothes according to fabric, we recommend using the delicate programmes for sensitive fabrics, there is a special wool programme for woollens.
- Sort clothes according to how dirty they are.
- Wash lightly soiled garments using a short programme.
- Use a programme without prewash for medium-soiled garments.
- Wash heavily soiled garments using a long programme with prewash.
- Sort your clothes according to colour.
- Wash whites and coloured separately.
- We recommend loading the washing machine to its full capacity for best water and energy efficiency.
- Before using the drying programme, first check the label on the garment to make sure it can be tumble dried.


Detergents



1. Prewash
2. Main wash
3. Fabric softener

Your washing machine's detergent dispenser has three compartments. Add the required amount of detergent and fabric softener into the specific sections of the detergent dispenser before starting the wash programme. Compartment 1 (Prewash) is only used with the "Intensive +" programme. The detergent dispenser is designed to allow the use of liquid detergents, you should not use a liquid detergent on programmes with a prewash stage or when using the delay timer. Do not exceed the "MAX" level in the fabric softener section,

Selecting the wash programme

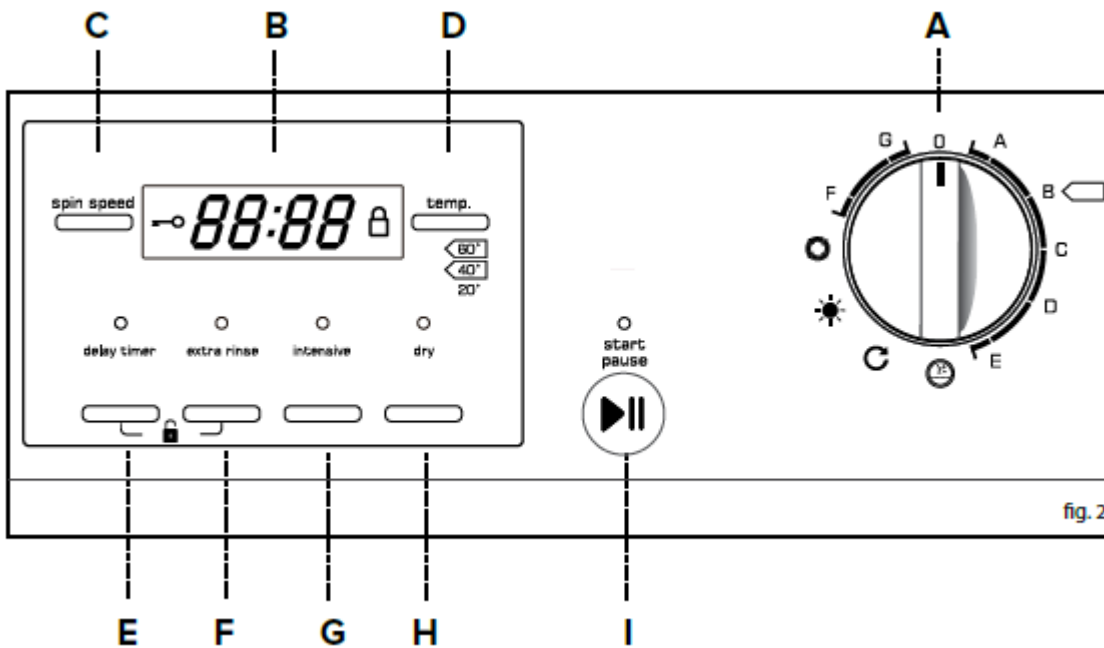

- A) Programme selector
- B) Display
- C) Spin speed selection
- D) Wash temperature
- E) Delay button
- F) Extra rinse button
- G) Intense button
- H) Dry button
- I) Start/Pause button

To select the wash programme

- Turn the "Programme selector" knob to the required programme.
- Select the required spin speed using the "Speed Speed" button.
- Select the wash temperature using the "Wash Temperature" button.
- Select any required extra options.
- Press the "Start/Pause" button.
- When a wash programme is in progress the programme can be paused by pressing the "Start/Pause" button at any time. To restart the programme, press the "Start/Pause" button again.

Programme selection

To select a programme, turn the "Programme Selector" knob to the required programme, as detailed in the programme listing below and also on the detergent dispenser. The display will show the programme duration.

Spin speed selection

Each selected programme has its own preset spin speed as shown in the programme listing below. If you press the "Spin speed" button the currently set spin speed will show on the display. You can reduce this or switch it off completely if required by pressing the "Spin speed" button a number of times. If you miss the speed you want you can come back round to it again by pressing a few more times.

A programme without final spin is used to prevent creasing when washing special fabrics.

Wash temperature selection

Each selected programme has its own preset wash temperature, as shown in the programme listing below. If you press the "Wash Temperature" button the currently set temperature will show on the display. You can change the wash temperature if required by pressing the "Wash temperature" button a number of times.

Extra functions

Extra functions can be selected once the programme has been set. To select any extra function, press the required extra function button. The programme time shown on the display will reduce or increase according to the extra functions selected.

Delay timer

A delay of up to 24 hours can be added to the end time in half hour increments to allow the wash programme to finish at a convenient time. The delay time is to the end of the wash programme not the start of the programme. The "Delay Timer" function is not available for the "Spin" programme.

To set the delay timer

- Press the "Delay Timer" button.
- Pressing the "Delay Timer" button again increases the delay by 30 minutes for each press, up to a maximum of 24 hours.
- Once the required time delay is shown on the display, the washing machine will set after approximately three seconds delay.

Extra rinse

- This function adds up to 3 extra rinse cycles to the programme, which is ideal for large loads and garments belonging to people with sensitive skin. Please note this function will increase water consumption. Press the "Extra Rinse" button once to select one extra rinse, the display will show "P - 1".
- Press the "Extra Rinse" button again to select 2 extra rinses, the display will show "P - 2" a further press selects the maximum of 3 extra rinses.
- The "Extra Rinse" light is illuminated and flashes during the programme, "P - 1/2/3" is displayed, alternating with the remaining programme run time.

Intensive

Pressing the "Intensive" button before starting a programme selects this function. This increases the washing time during the main wash stage of the programme and is ideal for washing dirty loads.





Dry


- This function adds a drying cycle to the end of a programme. The drying cycle adds 2 hours to the duration.
- The display shows the full duration of wash and dry cycles. This function is only available on certain programmes.
- If you select the wash and dry programme, the load must not be over 4kg. You may need to remove some items to lighten the load.





Start/Pause

Press the "Start/Pause" button to start the selected wash programme running, the indicator light stays on. If this is pressed again while the machine is running a programme the washer will pause and the indicator light will flash.

Washing machine programmes

Index	Programmes	Wash Temperature Options								Preset Spin Speed	Delay	Extra Rinse	Intense	Dry
		Cold	15	20	30	40	50	60	90					
A	Prewash **					P	A	A	A	1000	A	A	A	A
B *	Cotton					P	A	A	A	1000	A	A	A	A
C	Synthetics					P	A	A		1000	A	A	A	A
D	Wool / Handwash	P	A	A	A	A				600	A			
E	Delicate	P	A	A	A	A				600	A			
	Drum Clean								P	1000				
	Refresh										A			P
	Dry									N/A	A			P
	Spin									1000				A
F	Rapid	P	A	A	A					800	A	A	A	A
G	Hygiene	A	A	A	A	A	A	P	A	1000	A	A	A	A

P – preset A – available option function  – function not available

Index	Programme	Detergent Compart.	Max. Spin Load Capacity (kg)	Programme Time	Type of Laundry
A	Prewash **	1 & 2	6	2:04	Heavily soiled cotton and linens
B	Cotton	2	6	1:49	Cotton and linens
C	Synthetics	2	3	1:10	Synthetic textiles
D	Wool / Handwash	2	1	0:45	Machine washable woollens
E	Delicate	2	1	0:45	Silk, lace and other delicates
	Drum Clean	2	N/A	1:00	None
	Refresh	N/A	2	0:30	Clean items for airing
	Dry	N/A	3	2:00	Cotton, linens and synthetics
	Spin	N/A	6	0:12	Any load
F	Rapid	2	2	0:15	Lightly soiled fabrics
G	Hygiene	2	3	1:51	Sportswear and underwear