


Names and Functions

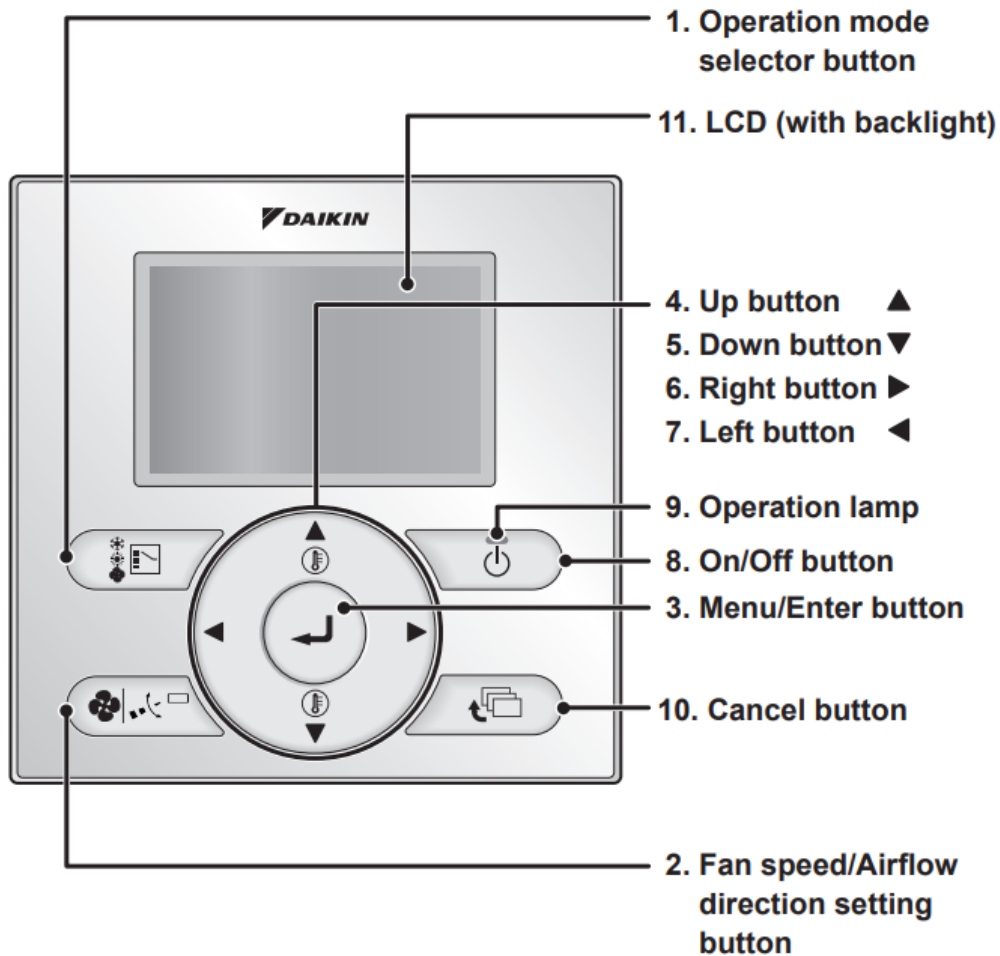

Functions other than basic operation items (i.e., On/Off, Operation mode selector, Fan speed/Airflow direction, and temperature settings) are set from the menu screen.

Turning on the cooling system:

- Press the On/Off button. The Operation lamp (green) will be lit and the system will start operating.
- The set temperature will increase by 1°C when the button is pressed and decrease by 1°C when the button is pressed. *No temperature settings are possible while in fan mode.
- To make Air Volume and/or airflow direction control, press the Fan speed/airflow direction setting control button. To select Air Volume or airflow direction setting, press buttons (6) and (7)
- With Air Volume setting selected, select the desired fan speed from Low, Medium, High or Auto using the buttons (4) and (5).

Turning off the cooling system:

- The Operation lamp will be turned OFF and the system will stop operating whether n On/Off button is pressed again.
- Do not turn power OFF soon after the system stops operating. Be sure to wait for at least 5 minutes so that the drain discharging device will finish discharging the residual drain. Otherwise, water leakage or failures may result.