

Microwave oven

User manual

OVEN WITH MICROWAVE

SIEMENS IQ700 - CM633GBS1B

SWITCHING THE APPLIANCE ON

Use the On/Off button to switch the appliance on. The On/Off symbol above the button is illuminated in blue. The Siemens logo appears in the display, and then a type of heating and a temperature.

SWITCHING OFF THE APPLIANCE

Use the On/Off button to switch off the appliance. The lighting above the button goes out. A set function is cancelled. The time appears in the display.

STARTING OR INTERRUPTING OPERATION

To start operation or to interrupt an operation which has started running,

press the Start/Stop button. The cooling fan may continue to run after an operation is interrupted. Press the On/Off button to delete all settings.

If you open the cooking compartment door during operation, the operation is interrupted. Close the cooking compartment door to continue operation.

SELECTING AN OPERATING MODE

 
1. If you want to set an operating mode, the appliance must be switched on.
2. Press the menu button. The operating modes menu opens.

3. Use the rotary selector to select the required operating mode. Depending on the operating mode, different options are available. Use the arrow to reach the required operating mode.
4. Use the > rotary selector to change the selection. Depending on the option, change different settings.
5. Press the Start/Stop button to start.


SETTING THE TYPE OF HEATING & TEMPERATURE

After the appliance is switched on, the suggested type of heating appears with the temperature. You can start this setting immediately with the Start/Stop button. For other settings, you can change the values as shown below.


Example 4D Hot air at 180°C.
Use the rotary selector to change the type of heating.



 
Press the arrow > to switch to the temperature.



 Use the rotary selector to change the temperature. Press the Start/Stop button.



GETTING TO KNOW YOUR APPLIANCE

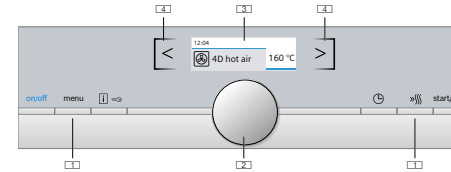 

1. Buttons - the buttons to the left and right to the rotary selector have a pressure point. Press these buttons to activate them.
2. Rotary selector - you can turn the rotary selector clockwise and anti-clockwise.
3. Display - you can see the current adjustment values.
4. Touch fields - there are sensors under the touch field to the left < and right >.

CONTROLS

The individual controls are adapted for the various functions of your appliance.

BUTTONS & TOUCH FIELDS

On/Off buttons - switches the appliance On/Off.

Menu - Opens the operating modes menu.

Info - Displays notes & activates/deactivates childproof lock.

Time - Opens the time setting options menu.

Start/Stop - Switches rapid heat up On/Off.

Start/Stop - starts, pauses or cancels operation.

< - Navigates left.

> - Navigates right.

ROTARY SELECTOR

Use the rotary selector to change the operating modes and adjustment values shown in the display. For temperature for example, you must turn the rotary selector back when the minimum or maximum temperature is reached.

DISPLAY

The display is structured so that the information can be read at a glance. The value that you can currently set is in focus.

STATUS BAR

The status bar is at the top of the display. The time and set time functions are displayed here.

CLEANING & CARE

Do not use:

- Harsh or abrasive cleaning agents.
- Cleaning agents with a high alcohol content.
- Hard scouring pads or cleaning sponges.
- High-pressure cleaners or steam cleaners.
- Special cleaners for cleaning the appliance while it is hot.