


Operating Instructions – Washer Dryer Indesit IWDE126

Control Panel

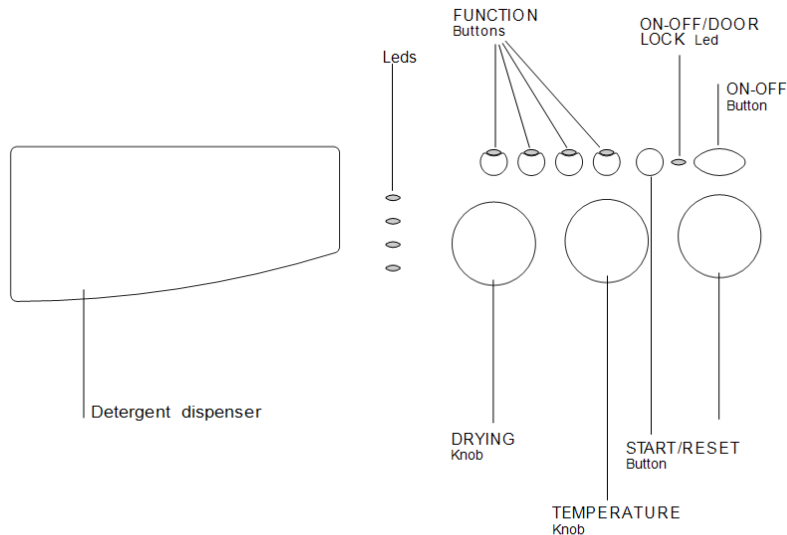

Detergent dispenser: To add detergent and fabric softener.

LEDS: To find out which wash cycle phase is under way.

If the Delay Timer function has been set the time left until the programme starts will be indicated.

- **Drying knob:** To set the desired drying cycle.
- **Function buttons:** To select the functions available. The button corresponding to the function selected will remain on.
- **Temperature knob:** To set the temperature or the cold wash cycle.
- **Start/Reset button:** To start the programmes or cancel any incorrect settings.
- **On/Off Door Lock Led:** To find out whether the Washer-dryer is on and if the appliance door can be opened.
- **On/Off button:** To turn the Washer-dryer on and off.
- **Programme knob:** To select the wash programmes. The knob stays still during the cycle.

Standby mode

This washing machine in compliance with new energy saving regulations is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected. Press the ON/OFF button briefly and wait for the machine to start up again.

LEDS


The LEDS provide important information:

Delay set

If the Delay Timer function has been enabled once you have started the programme the LED corresponding to the delay set will begin to flash:




As time passes the remaining delay will be displayed and the corresponding LED will flash:

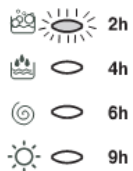

Once the set delay is complete the flashing LED will turn off and the programme set will start.

Cycle phase under way

During the wash cycle the LEDs gradually illuminate on to indicate the cycle phase under way:

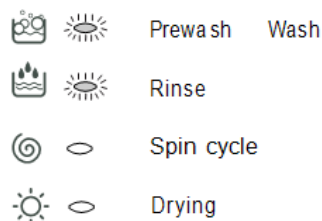

Note

- During draining the LED corresponding to the Spin cycle phase will be turned on.
- When the drying cycle is complete the indicator light relative to phase will flash to indicate that the DRYING knob needs to be set back to the 0 setting.

Function Buttons

The FUNCTION BUTTONS also act like LEDs. When a function is selected the corresponding button is illuminated.




If the function selected is incompatible with the programme set the button will flash and the function will not be enabled.

If you set a function that is incompatible with another function you selected previously only the last one selected will be enabled.

On-Off Door Lock LED

If this LED is on the appliance door is locked to prevent it from being opened accidentally; to avoid any damages wait for the LED to flash before you open the appliance door.

Programme Table

Type of fabric and degree of soil	Program.	Temperature	Drying Cycle	Detergent		Fabric softener	Cycle length (minutes)	Description of wash cycle
				pre-wash	wash			
Standard								
White prewash: Extremely soiled whites (sheets tablecloths etc.)	1	90 C	•	•	•	•	155	Pre-wash wash cycle rinse cycles intermediate and final spin cycles
White Cotton: Extremely soiled whites (sheets tablecloths etc.)	2	90 C	•	-	•	•	150	Wash cycle rinse cycles intermediate and final spin cycles
White Cotton: Heavily soiled whites and fast colours	2	60 C	•	-	•	•	140	Wash cycle rinse cycles intermediate and final spin cycles
White Cotton: Heavily soiled whites and delicate colours	2	40 C	•	-	•	•	125	Wash cycle rinse cycles intermediate and final spin cycles
Colour Cotton: Slightly soiled whites and delicate colours (shirts jumpers etc.)	3	40 C	•	-	•	•	85	Wash cycle rinse cycles intermediate and final spin cycles
Easy care: Heavily soiled fast colours (baby linen etc.)	4	50 C	•	-	•	•	83	Wash cycle rinse cycles anti-crease or delicate spin cycle
Easy care: Heavily soiled fast colours (baby linen etc.)	4	40 C	•	-	•	•	70	Wash cycle rinse cycles anti-crease or delicate spin cycle
Wool	5	40 C	-	-	•	•	50	Wash cycle rinse cycle delicate spin cycle
Silk: Very delicate fabrics (curtains silk viscose etc.)	6	30 C	-	-	•	•	45	Wash cycle rinse cycles anti-crease or draining cycle
Drying cotton	7	-	•	-	-	-	-	
Drying delicates	8	-	•	-	-	-	-	
Time 4 you								
Flesh Clean: Heavily soiled whites and fast colours	9	60 C	-	-	•	•	60	Wash cycle rinse cycles intermediate and final spin cycles
Flesh Nylon: Delicate colours (all types of slightly soiled garments)	10	40 C	-	-	•	•	40	Wash cycle rinse cycles delicate spin cycle
Daily: Delicate colours (all types of slightly soiled garments)	11	30 C	•	-	•	•	30	Wash cycle rinse cycles and delicate spin cycle
Sport								
Sports Shoes (MAX. 2 pairs)	12	30 C	-	-	•	•	50	Cold wash (without detergents) wash cycle rinse cycles and delicate spin cycle
Special Sport: Fabrics for sportswear (Tracksuits shorts etc.)	13	30 C	-	-	•	•	60	Wash cycle rinse cycles intermediate and final spin cycles
PARTIAL PROGRAMMES								
Rinse		-	•	-	-	•	-	Rinse cycles and spin cycle
Spin		-	•	-	-	-	-	Draining and spin cycle
Drain		-	-	-	-	-	-	Drain

Notes

- For programme 9 we advise against exceeding a wash load of 3.5 kg. For programme 13 we advise against exceeding a wash load of 2 kg.

Special programme

Daily (programme 11 for Synthetics) is designed to wash lightly soiled garments in a short amount of time: it only lasts 30 minutes and allows you to save on both time and energy. By setting this programme (11 at 30 C) you can wash different fabrics together (except for woollen and silk items) with a maximum load of 3 kg.

We recommend the use of liquid detergent.

Starting a Programme

1. Switch the Washer-dryer on by pressing **ON**. All the LEDs will light up for a few seconds and the ON/OFF DOOR LOCK Led will begin to flash.
2. Load your laundry into the washer-dryer and shut the appliance door.
3. Set the PROGRAMME knob to the programme required.
4. Set the wash temperature.
5. Set the drying cycle if necessary.
6. Add the detergent and any fabric softener.
7. Start the programme by pressing the START RESET button.

To cancel it keep the START RESET button pressed for at least 2 seconds.

8. When the programme is finished the ON/OFF DOOR LOCK Led will flash to indicate that the appliance door can be opened. Take out your laundry and leave the appliance door ajar to allow the drum to dry thoroughly. Turn the Washer-dryer off by pressing the ON/OFF button.

Setting the temperature

Turn the TEMPERATURE knob to set the wash temperature. The temperature can be lowered or even set to a cold wash.

Set the drying cycle

Turn the DRYING knob to set the desired drying type.

Two options are available:

- A – Based on time: From 40 minutes to 180.
- B – Based on the damp level of the dry clothes:

Iron- slightly damp clothes easy to iron

Hanger - dry clothes to put away.

Cupboard - very dry clothes recommended for towelling and bathrobes

- A cooling stage is foreseen at the end of the drying cycle.
- If your laundry load to wash and dry is exceptionally in excess of the maximum load foreseen (see table opposite) perform the wash cycle and when the programme is complete divide up the garments and put part of them back in the drum. Now follow the instructions provided for a dry only cycle.
- Repeat this procedure for the remainder of the load

Fabric Load type type	Max. load (kg)	Cupboard	Hanger	Iron
Cotton Clothing of different sizes Linen	5	180	170	140
Cotton Terry towels	5	180	170	140
Sheets Shirts Cotton	2.5	140	120	100
Acrylics Pyjamas	1	70	65	60
Nylon Slips tights	1	70	65	60

Dry Only

Turn the PROGRAMME knob to one of the drying settings (7–8) depending on the type of fabric then select the desired drying type using the DRYING knob.

Important: A spin cycle is carried out during the drying if you have set a cotton programme and a level of dryness.

For cotton loads of less than 1 Kg, use the drying programme designed for delicate fabrics.

Functions

To enable a function:

1. Press the button corresponding to the desired function according to the table below;
2. The function is enabled when the corresponding button is illuminated.

Note: The rapid flashing of the button indicates that the corresponding function cannot be selected for the programme set.

Function	Effect	Comments	Enable with programmes
Delay Timer	Delays the start of the wash by up to 9 hours.	Press the button repeatedly until the LED corresponding to the desired delay is turned on. The fifth time the button is pressed the function will be disabled. N.B.: Once you have pressed the Start Reset button the delay can only be decreased if you wish to modify it.	All
Easy Iron	This option reduces the amount of creasing on fabrics making them easier to iron.	When this function is set programmes 4 6 will end with the laundry left to soak (Anti-crease) and the Rinse cycle phase LED will flash – to conclude the cycle press the START RESET button; – to run the draining cycle alone set the knob to the relative symbol and press the START RESET button. If you also want to run the drying cycle, this button is enabled only if combined with the level Iron.	3, 4, 6, 9, 10, Rinse cycle.
Extra Rinse	Increases the efficiency of the rinse.	Recommended when the appliance has a full load or with large quantities of detergent.	1, 2, 3, 4, 9, 10, 12, 13, Rinse cycle.
1220-600	Reduces the spin speed		All programmes except for 6, 7, 8 and draining.