

Washer Dryer

User manual

WASHER DRYER

SIEMENS - WK14D321GB

USING YOUR APPLIANCE

Washing Only:

- Set the programme selector to the desired programme. e.g. cotton 60°C and the recommended load in kg are shown alternately only on the display panel. The \diamond symbol flashes.
- Load the laundry.
- Press the start/pause button. Remaining time is shown in the display panel, the \diamond symbol lights up and washing programme starts.

Drying only:

- Set the programme selector to the desired drying programme. The display panel alternately shows \curvearrowright (remaining time) and the recommended load in kg.
- Press the dry button to set the drying time. Load the laundry.
- Press start/pause button. Remaining time \curvearrowright symbol shown in the display panel and the \diamond symbols light up.
- The drying programme starts.


Washing and drying:

- Set the programme selector to the desired programme. e.g. cotton 60°C and the recommended load in kg are shown alternately only on the display panel. The \diamond symbol flashes.
- If necessary, adjust the spin speed and select any washing options for your individualised programme.
- Press the dry button to set the drying time. Load the laundry. Press the start/pause button.

DETERGENTS & CARE PRODUCTS

The detergent drawer is divided into three compartments.

- Compartment I: detergent for prewash.
- Compartment II: detergent for main wash.
- Compartment \otimes : Liquid such as fabric softener.

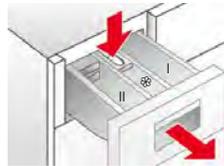


Liquid detergent insert: this must be folded down before liquid detergents are used.

To do this:

- Pull out the detergent drawer as far as the stop.
- Press on the zone labelled PUSH and take out the detergent drawer.
- Pull the insert in compartment II towards as far as stop and push it down. Insert the detergent drawer.

GETTING TO KNOW YOUR APPLIANCE

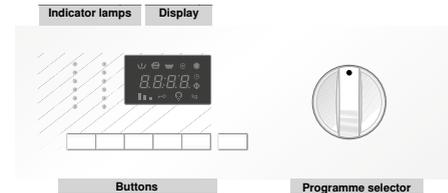

1. Indicator lamps
2. Display panel
3. Washing and drying options
4. Programme selector

CLEANING & CARE

HOUSING & CONTROL PANEL

Wipe with a soft, damp cloth.

Remove detergent and cleaning agent residue immediately.

Do not clean with a jet of water.

DRUM

- Remove any foreign bodies from the drum and rubber seals.
- Only use proprietary brand of descaler with corrosion inhibitor for washing machines for descaling the washer-dryer.
- Observe the manufacturers instructions regarding use and dosage.
- After descaling and removing rust from the drum, run the rinse + spin programme several times to remove any remaining acid.

DETERGENT DRAWER



If there are detergent or care product residues:

- Pull out the detergent drawer as far as the stop.
- Press on the zone labelled push and take out the detergent drawer.
- Clean the detergent drawer guide in the washer-dryer. Remove the fabric softener compartment insert.
- Clean the detergent drawer and fabric softener compartment insert under running water.
- Insert the fabric softener compartment insert. Insert the detergent drawer.

DRAIN PUMP



Turn the programme selector to off. Use a screwdriver to release the lock pins. Tip the kick panel and pull upwards to remove.

DRAINING THE WATER



Take the drain hose out of the retainer. Remove the plug from the drain hose and release the washing water. Place the drain hose into the retainer.

WASHER DRYER

SIEMENS - WD14H422GB

 
SWITCHING THE APPLIANCE ON

Close the washer dryer door.

Open the washer dryer door.



Select Start/Reload. End of the programme.



Select the washing/drying programme.



Set programme selector to Off.



Max. load in display panel.



If required, change the programme setting and/or select additional functions.



 
Open the door and remove the laundry.




Sort and load the laundry.




Open the Detergent drawer.



Dose detergent according to the dosing.

 


GETTING TO KNOW YOUR APPLIANCE

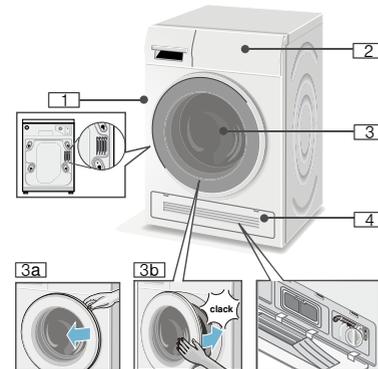

1. Hot air outlet
2. Operating/display panel
3. Door with handle
- 3a. Open the door
- 3b. Close the door
4. Service flap and cool air inlet

CONTROL PANEL

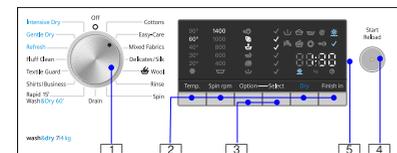

1. Select a programme.
2. Select buttons temperature, spin, speed, finish in and dry.
3. Select button for option and select for additional functions.
4. Start programme - Start/reload button.
5. Display panel for settings and information.

CLEANING & CARE

The following instructions must be observed when preparing your laundry:

- Always follow the manufacturers instructions when dosing all detergents, cleaning aids, care products and cleaning agents.
- Do not exceed maximum load.
- Keep detergents and agents for the pretreatment of laundry away from the surfaces of the washer dryer.
- Using a damp cloth, immediately remove any fine spray residue and other droplets.
- Do not use abrasive cloths, sponges or detergents to clean your appliance.
- Do not clean the appliance with a water jet.
- Use chlorine free cleaning agent to clean the drum. Do not use steel wool cleaning products.

CLEANING THE DETERGENT DISPENSER

If it contains detergent or fabric softener residue:

- Pull out the detergent drawer. Depress the insert and remove the drawer completely. Take out insert: using your finger, press insert upwards.
- Clean the detergent dispenser and insert with water and a brush and dry. Attach the insert and lock into position (push the cylinder onto the guide pin). Insert detergent drawer.