


Washer Dryer


User's Manual

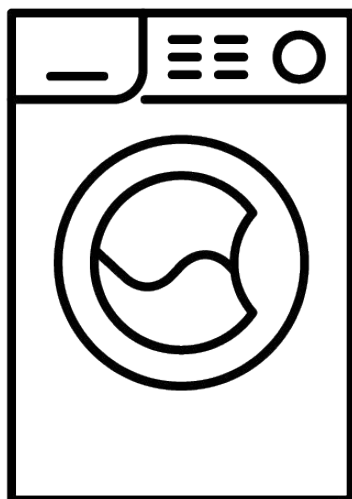

Operating Instructions - Washer Dryer Hotpoint BIWDHL7128

Control Panel

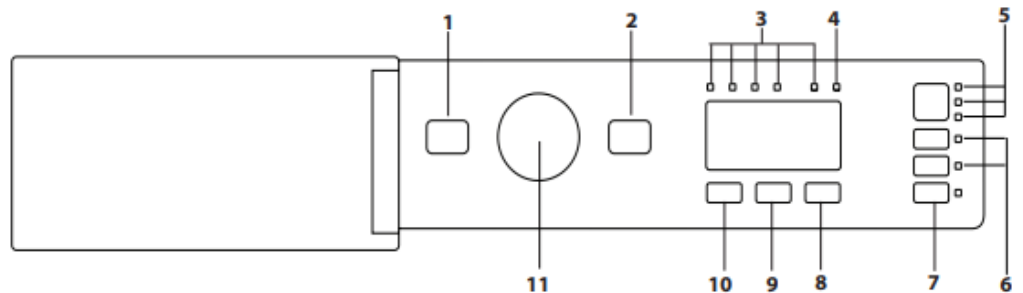


1. ON/OFF button
2. START/PAUSE button with indicator light
3. WASH CYCLE PROGRESS indicator lights
4. DOOR LOCKED indicator light
5. STAIN REMOVAL button with indicator lights
6. FUNCTION buttons with indicator lights
7. DRYING ONLY button with indicator light
8. DRYING LEVELS button
9. TIME DRYING button
10. TEMPERATURE button
11. WASH CYCLE knob



Quick Start



1. Turn the washing machine on by pressing the ON/OFF button. All the indicator lights will light up for a few seconds, then only the lights corresponding to the settings for the selected wash cycle will remain lit; the START/PAUSE indicator light will also flash.
2. Open the door. Load the laundry while making sure not to exceed the maximum load quantity indicated in the Wash Cycle Table.
3. Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments as described in "DETERGENT DISPENSER DRAWER" section.
4. Close the door.
5. Set the WASH CYCLE knob to the desired cycle.
6. Modify the temperature: pressing the 40° 60° button allows for gradually reducing the temperature down to the cold wash level (20°C).
7. Press the START/PAUSE button to start the wash cycle; the relative indicator light will light up steady green and the door will lock (indicator light on)

Table of wash cycles

Maximum load 7 kg Power input in off mode 0.5 W / in left-on mode 8 W								Detergents and Additives		Recommended detergent	
Wash cycle	Temperature		Maximum spin (r.p.m.)	Max. load for wash cycle (kg)	Max. load for drying cycle (kg)	Duration (Minutes)	Drying	Wash	Fabric softener	Powder	Liquid
	Default	Range						2	3		
1 Daily Mix Wash & Dry	40 °C	☼-40 °C	800	3,5	3,5	265	●	●	○	-	✓
2 Shirts & T-Shirts	40 °C	☼-40 °C	1000	2,0	2,0	180	●	●	○	-	✓
3 Pre Iron	-	-	-	1,5	-	20	-	-	-	-	-
4 Steam Refresh	-	-	-	1,5	-	20	-	-	-	-	-
5 Cotton (2)	40 °C	☼-60 °C	1200	7,0	5,0	230	●	●	○	✓	✓
6 Synthetics (3)	40 °C	☼-60 °C	1200	4,0	3,5	195	●	●	○	✓	✓
7 Anti Stain Quick	40 °C	☼-40 °C	1200	3,5	3,0	45	●	●	○	-	✓
8 Anti Stain 100	40 °C	☼-40 °C	1200	7,0	5,0	205	●	●	○	-	✓
9 White	60 °C	☼-90 °C	1200	7,0	5,0	140	●	●	○	✓	-
10 Eco Cotton  (1)	60 °C	60° C	1200	7,0	5,0	175	●	●	○	✓	✓
		40°C	1200	7,0	5,0	230	●	●	○	✓	✓
11 Coloureds	40 °C	☼-40 °C	1200	7,0	5,0	100	●	●	○	-	✓
12 Ultradelicates	30 °C	☼-30 °C	-	1,0	1,0	80	●	●	○	-	✓
13 Wool	40 °C	☼-40 °C	800	1,5	1,5	75	●	●	○	-	✓
14 Fast 30'	30 °C	☼-30 °C	800	3,0	-	30	-	●	○	-	✓
 Rinse+Spin	-	-	1200	7,0	5,0	50	●	-	○	-	-
 Spin & Drain	-	-	1200	7,0	5,0	10	●	-	-	-	-

● Required dosage ○ Optional dosage

Drying only

Press button  to perform the drying-only cycle. After selecting the desired cycle (compatible with the type of garments), press button  to exclude the washing phase and start the drying phase at the maximum level for the selected cycle.