# Washer Dryer

## User's Manual

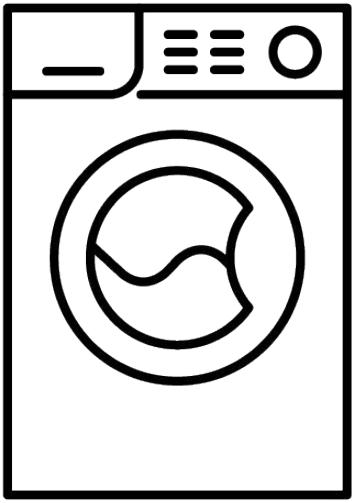

# Operating Instructions – Washer Dryer Zanussi ZJD12191

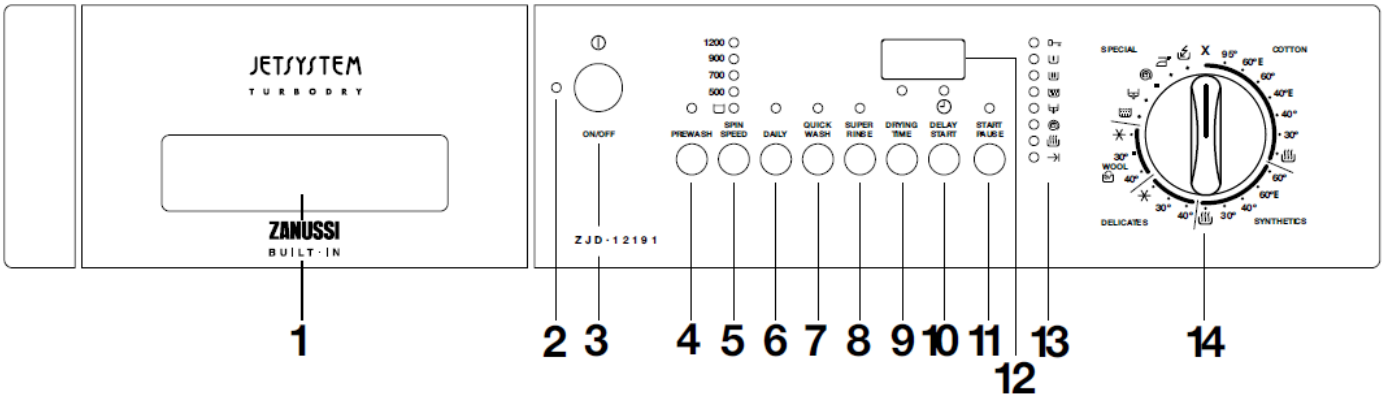


**Control Panel**

1. Detergent dispenser drawer
2. Mains-on light
3. ON/Off button
4. Prewash button
5. Spin speed button
6. Daily button
7. Quick wash button
8. Super rinse button
9. Drying time button
10. Delay start button
11. Start/Pause button
12. Display
13. Programme progress display
14. Programme selector dial

**Using the Machine**

- Load the laundry
- Add detergent and fabric softener if required.
- Switch on the machine using the ON/OFF switch.
- Select the required programme using the selector dial. The lights corresponding to the different phases making up the selected programme light up.
- Select the spin speed or rinse hold option.
- Select the required options.
- Start the programme by pressing the START/PAUSE button.
- At the end of the programme the display will show a blinking ‘0’.
- Switch off the machine by pressing the ON/OFF button.

**Drying only**

- Load the laundry (max 2.5kg for cottons and linens and 2kg for synthetics).
- Press the ON/OFF button to switch the machine on.

- Select the drying programme.
- Press the drying time button until the time required appears in the display, the corresponding light comes on
- Press the START/PAUSE button to start the programme.
- At the end of the cycle turn the selector dial to the off position and press the ON/OFF switch to turn off the machine.

**Washing programmes**

| Section | Temp. | Type of fabric | Programme description | Additional functions | Max. load | Consumption* | | |
|---|---|---|---|---|---|---|---|---|
| | | | | | | Energy kWh | Water lt | Time min |
| COTTON | 95° | Whites | Wash at 95°C<br>3 rinses<br>Normal spin | SPIN SPEED<br>RINSE HOLD<br>PREWASH<br>DAILY, QUICK<br>SUPER RINSE | 5 kg | 1.9 | 52 | 142 |
| *COTTON | 60°E | Whites Economy | Wash at 60°C<br>3 rinses<br>Normal spin | SPIN SPEED<br>RINSE HOLD<br>PREWASH<br>SUPER RINSE | 5 kg | 0.85 | 49 | 136 |
| COTTON | 60° | Whites and Fast coloureds | Wash at 60°C<br>3 rinses<br>Normal spin | SPIN SPEED<br>RINSE HOLD<br>PREWASH<br>DAILY, QUICK<br>SUPER RINSE | 5 kg | 1.2 | 49 | 121 |
| COTTON | 40°E | Coloureds ECONOMY | Wash at 40°C<br>3 rinses<br>Normal spin | SPIN SPEED<br>RINSE HOLD<br>PREWASH<br>SUPER RINSE | 5 kg | 0.9 | 49 | 141 |
| COTTON | 30°-40° | Non-fast coloureds | Wash at 30°-40°<br>3 rinses<br>Normal spin | SPIN SPEED<br>RINSE HOLD<br>PREWASH<br>SUPER RINSE<br>DAILY, QUICK | 5 kg | 0.7 | 49 | 118 |
| SYNTHETICS | 60° | Synthetics | Wash at 60°C<br>3 rinses<br>Delicate spin | SPIN SPEED<br>RINSE HOLD<br>PREWASH<br>SUPER RINSE<br>DAILY, QUICK | 2 kg | 0.85 | 41 | 89 |
| SYNTHETICS | 60°E | Synthetics ECONOMY | Wash at 42°C<br>3 rinses<br>Delicate spin | SPIN SPEED,<br>PREWASH<br>RINSE HOLD<br>SUPER RINSE | 2 kg | 0.5 | 41 | 89 |
| SYNTHETICS | 30°-40° | Synthetics | Wash at 30°-40°C<br>3 rinses<br>Delicate spin | SPIN SPEED<br>RINSE HOLD<br>PREWASH<br>SUPER RINSE<br>DAILY, QUICK | 2 kg | 0.45 | 38 | 79 |

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| DELICATES | 30°-40° Cold ✳ | Delicates | Wash at 30°-40°C or cold wash ✳<br>3 rinses<br>Delicate spin | SPIN SPEED, QUICK PREWASH<br>RINSE HOLD<br>SUPER RINSE | 2 kg | 0.55 | 58 | 58 |
| WOOL | 30°-40° Cold ✳ | Wool and Handwash | Wash at 30°-40°C or cold wash ✳<br>3 rinses<br>Delicate spin | SPIN SPEED<br>RINSE HOLD | 1 kg | 0.4 | 58 | 57 |

**Special Programmes**

| Selector dial position | Programme | Programme description | Additional functions | Max. load | Consumption* | | |
|---|---|---|---|---|---|---|---|
| | | | | | Energy kWh | Water lt | Time min |
| | Rinses | 3 rinses with liquid additive if required<br>Long spin | SPIN SPED<br>RINSE HOLD<br>SUPER RINSE | 5 kg | 0.1 | 40 | 47 |
| | Drain | | | 5 kg | - | - | 2 |
| | Spin | Separate long spin at 1200 rpm max | SPIN SPEED | - | - | - | 10 |
| | Easy Iron | Wash at 40°C<br>4 rinses<br>Short spin at 900 r.p.m. | PREWASH<br>SPIN SPEED<br>RINSE HOLD<br>DAILY, QUICK<br>SUPER RINSE | 1 kg | 0.35 | 39 | 102 |
| | Miniprogamme | Wash at 30°C<br>2 rinses<br>Short spin at 700 r.p.m. | SPIN SPEED<br>RINSE HOLD | 2.5 kg | 0.3 | 40 | 30 |
| X | Reset | For cancelling the wash programme which is running | | | | - | - |

**Drying programme**

| Degree of drying | Type of fabric | Max. load | Spin speed | Drying time mins |
|---|---|---|---|---|
| Extra dry<br>Ideal for towelling materials | Cotton and linen (bathrobes, bath towels, etc.) | 2.5 kg | 1200 | 110-120 |
| | | 1 kg | 1200 | 55-65 |
| Store dry (*)<br>Suitable for items to put away without ironing | Cotton and linen (towels, T-shirts, bathrobes) | 2.5 kg | 1200 | 100-110 |
| | | 1 kg | 1200 | 45-55 |
| | Synthetics and mixed fabrics (jumpers, blouses, underwear, household linen) | 1.5 kg | 900 | 100-110 |
| | | 1 kg | 900 | 55-65 |
| Iron dry<br>Suitable for ironing | Cotton and linen (sheets, tablecloths, shirts, etc.) | 2.5 kg | 1200 | 70-80 |
| | | 1 kg | 1200 | 35-40 |